




PRESTO

MOBILITY SCOOTER

IK8PRS (SILVER)

Edition 1

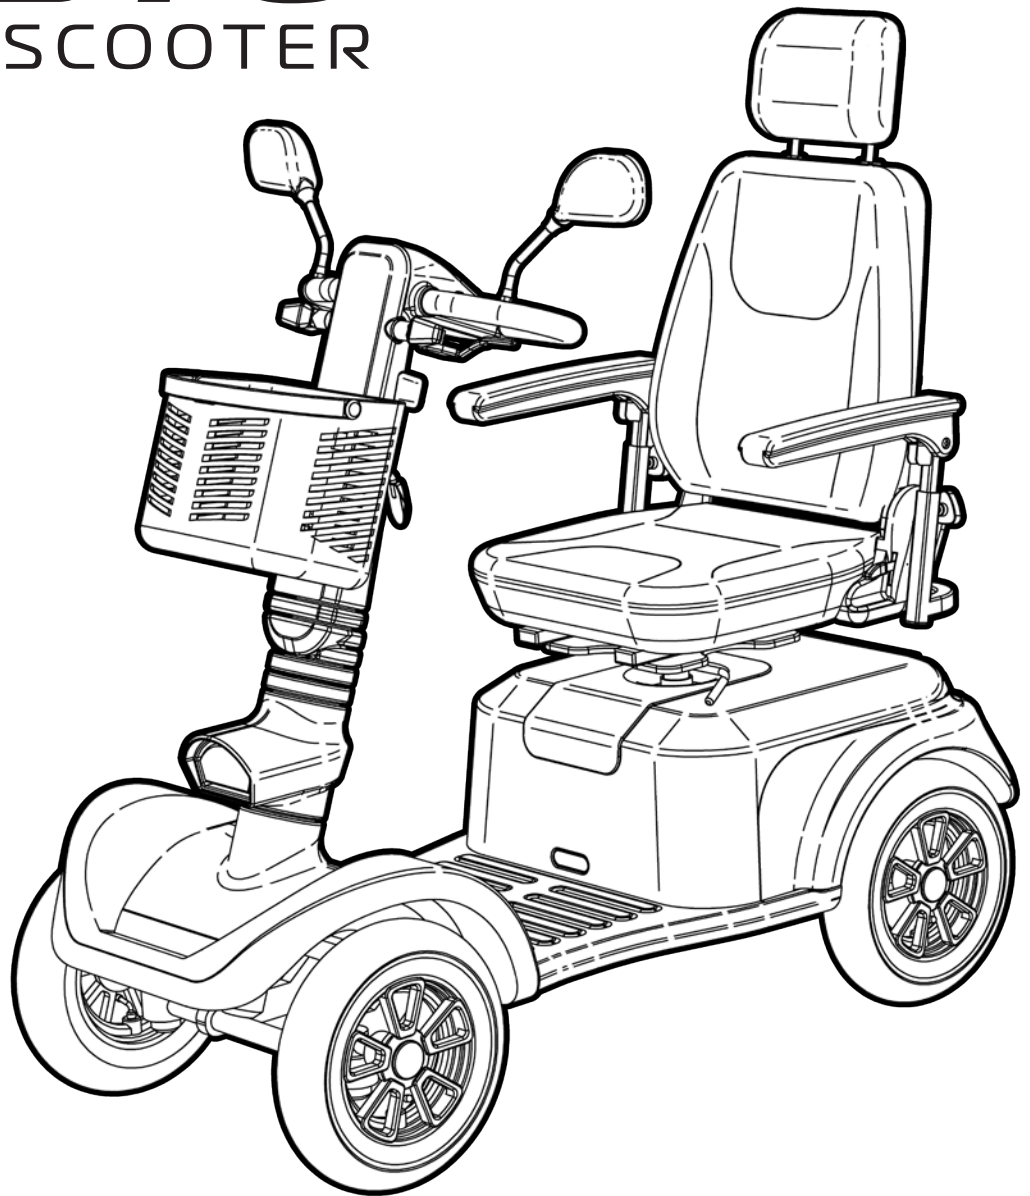

USER MANUAL

Please read and keep these instructions

ASK FOR THE BRAND

ikonmobility.com.au



IKON Mobility owns the copyright to the PRESTO Mobility Scooter user manual. Any information contained in this user manual shall not be photocopied, reproduced or translated into any other languages without the prior written consent of IKON Mobility.

IKON Mobility strives to provide the highest quality products possible. Product is subject to change without notice.

© Copyright **IKON Mobility**




IKON Mobility is part of **FOR-DE Group Pty Ltd**

ASK FOR THE BRAND

ikonmobility.com.au

CONTENTS

1. **INTRODUCTION**
2. **FEATURES**
3. **SPECIFICATIONS**
4. **SAFETY ADVICE**
5. **SAFETY ADVICE** (CONTINUED)
6. **EMI WARNING**
7. **EMI WARNING** (CONTINUED)
8. **UNPACK and INSPECT SUPPLIED PARTS**
9. **GLOSSARY OF SCOOTER**
10. **PREPARING THE SCOOTER FOR USE**
11. **ROTATE UP ARMRESTS**
12. **ROTATE SEAT**
13. **ADJUST SEAT HEIGHT**
14. **ADJUST SEAT HEIGHT** (CONTINUED)
15. **ADJUST SEAT HEIGHT** (CONTINUED)
16. **ADJUST HEADREST**
17. **ADJUST BACKREST ANGLE**
18. **ADJUST SEAT POSITION**
19. **ADJUST ARMREST WIDTH**
20. **ADJUST ARMREST HEIGHT**
21. **ADJUST ARMREST ANGLE**
22. **ADJUST TILLER ANGLE**
23. **INSPECT THE SCOOTER PRIOR TO USE**
24. **CHARGING BATTERIES**
25. **CHARGING BATTERIES** (CONTINUED)
26. **PREPARE TO RIDE THE SCOOTER**
27. **TURN ON SCOOTER**
28. **SCOOTER CONTROLS**
29. **SCOOTER CONTROLS** (CONTINUED)
30. **SCOOTER CONTROLS** (CONTINUED)
31. **DISENGAGE MOTOR (FREEWHEEL)**
32. **TROUBLESHOOTING**
33. **INSPECT / MAINTAIN / SERVICE**
34. **TYRE CARE**
35. **CLEANING THE SCOOTER**
36. **WARRANTY**
37. **WARRANTY** (CONTINUED)
38. **ACCESSORIES**
39. **ACCESSORIES** (CONTINUED)
40. **ACCESSORIES** (CONTINUED)

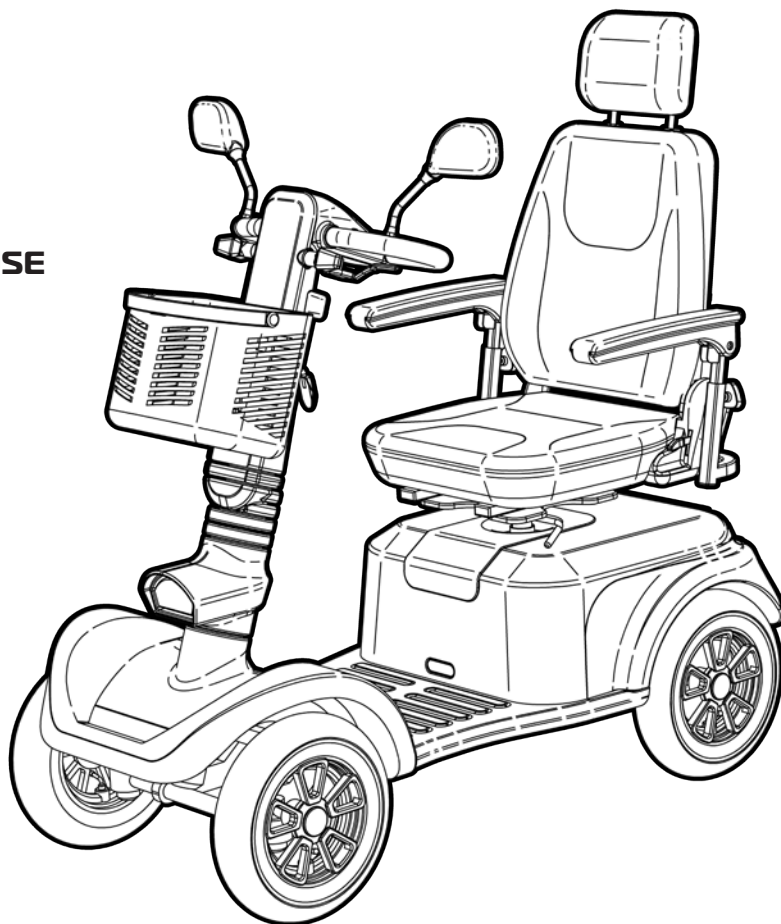

INTRODUCTION

Thank you for purchasing this IKON Mobility product.

If you have any issues or questions about the PRESTO Mobility Scooter please contact your supplier or IKON Mobility direct:

T: **+61 8 9248 4180**


E: **orders@for-de.com.au**

A: **1 Business Way, Malaga, Western Australia 6090**

INTENDED USE

This product has limitations and should be used in accordance to these guidelines. Failure to follow these guidelines may result in damage to the product and injury to the user.

This equipment **MUST** be assembled and used by a competent person. It is the responsibility of the user to ensure the suitability of this product for its intended use. The user should consult their appropriate healthcare professional if unsure of the correct product usage for their unique circumstances.

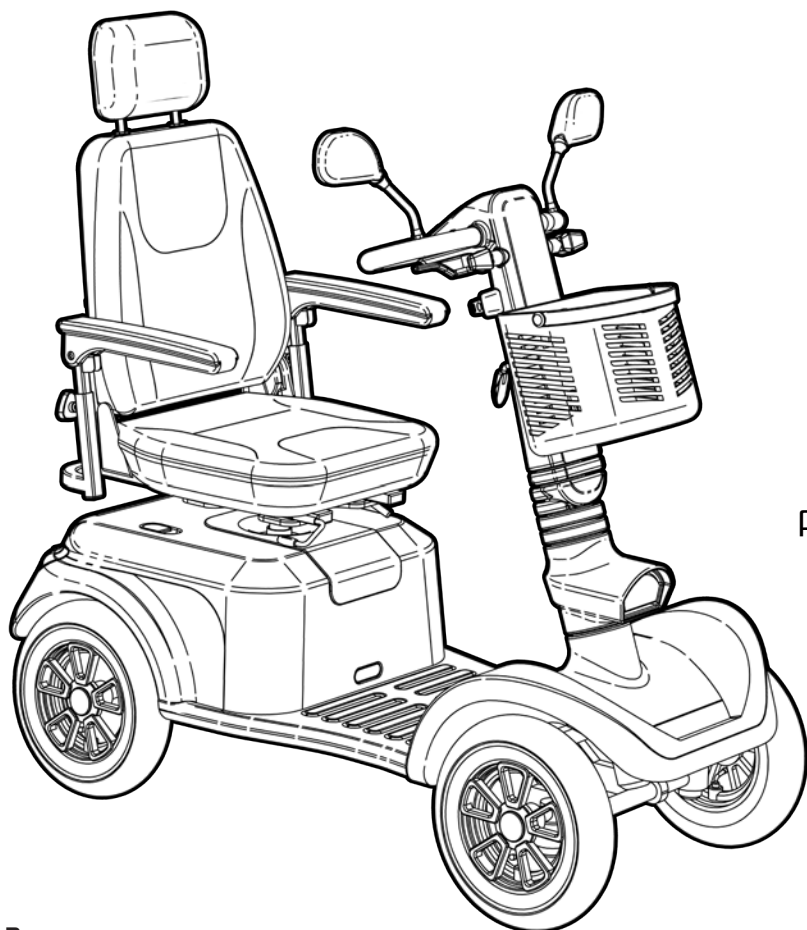

IMPORTANT NOTE

If you are ever unsure about any aspect of the PRESTO Mobility Scooter please do not use and contact your supplier for support.

1.

ASK FOR THE BRAND


ikonmobility.com.au

FEATURES

PREMIUM SCOOTER

- Large premium mobility scooter
- Full adjustable suspension
- Comfortable high back contoured rotating seat
- Height adjustable seat with depth adjustment away from tiller
- Width, height and angle adjustable flip up padded armrests
- Height adjustable headrest
- Angle adjustable backrest
- Padded loop handlebar
- Adjustable rear vision mirrors
- Fingertip operated controls
- Forward / Reverse drive settings
- LCD display
- Indicators and hazard lights
- Variable speed settings
- Battery power indicator
- Horn
- Gas assist adjustable tiller
- Removable basket with fold down handle
- LED Headlight and rear lights
- Rear wheel drive
- Large pneumatic tyres
- Electromagnetic brake

Please contact your supplier or IKON Mobility if you require any further information on the PRESTO Mobility Scooter.

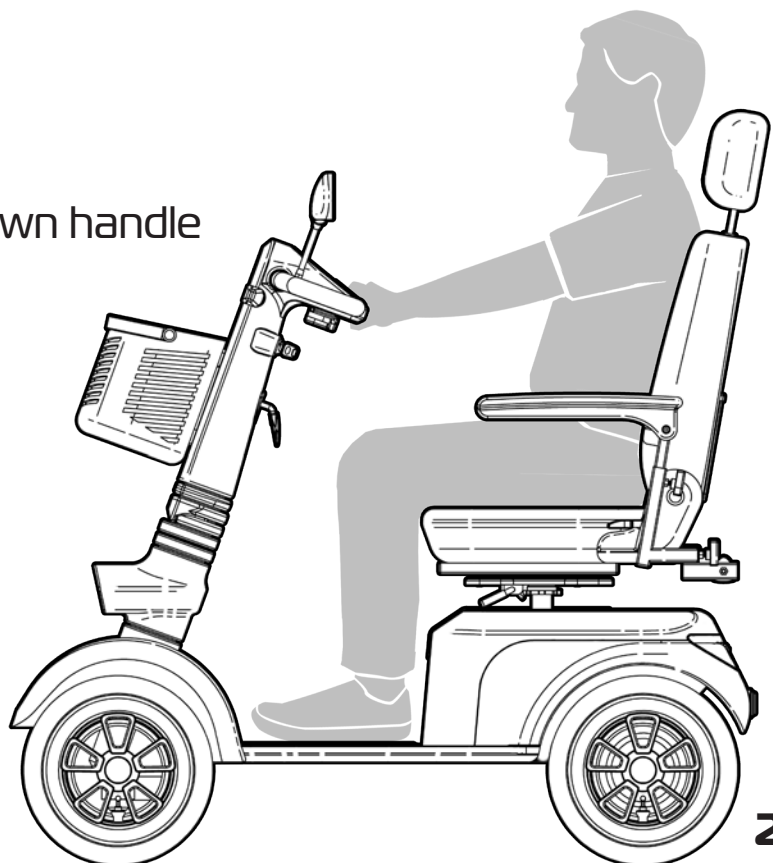

2.

SPECIFICATIONS

Note: All dimensions shown are nominal

- Overall: **1340mm (L) x 740mm (W) x 1300mm (H)**
- Seat: **500 - 700mm (W- int.) x 480mm (D) x 450mm / 475mm / 500mm / 525mm (H)**
- Backrest: **490mm (W) x 500mm (H) x 0 - 100° range**
- Headrest: **260mm (W) x 180mm (H) x 705mm / 720mm / 735mm / 750mm (H from seat)**
- Armrests: **380mm (L) x 60mm (W) x 190mm / 215mm / 240mm (H from seat)**
0 - 30° range
- Tiller: **470mm (W) x 960mm (H) x 45 - 100° range**
- Turning Circle: **1600mm**
- Speed: **10km/h**
- Maximum range: **Up to 44km***
- Safe climb angle: **10°**
- Maximum climb angle: **15°**
- Motor: **2.0Hp high torque motor (4 pole)**
- Batteries: **2 x 24V / 75 Amp XT Hybrid Gel (supplied)**
- Charger: **Victron 8 Amp (Supplied)**
- Tyres (Pneumatic): **Front / Rear: Ø356mm (14")**
- Product Weight: **136kg**
- Maximum User Weight: **160kg (on flat ground)**

* Maximum range is based on an ambient temperature of 20°C, 75kg user, brand new fully charged battery and constant driving speed of 5km/h on flat level ground.

Please contact your supplier or IKON Mobility if you would like any further information on the PRESTO Mobility Scooter.

3.

ASK FOR THE BRAND

ikonmobility.com.au

SAFETY ADVICE

For your own safety, please read the user manual before using the PRESTO Mobility Scooter. Failure to follow these guidelines may result in damage to the product and put the user at risk. If in any doubt, contact your supplier directly for advice.

- Please make sure that you are physically capable to operate this unit.
Consult your dealer/appropriate healthcare professional for advice prior to use.
- The PRESTO Mobility Scooter is designed to take maximum user weight of 160kg.
- Designed for single person use only (Do not carry passengers)
- Do not travel up inclines over 15 degrees (26.8% grade).
- Reduce speed when turning.
- Do not get on or off the scooter unless the brake is on and the scooter is switched off.
- Do not switch off the scooter while the scooter is moving.
- Do not drive the scooter where you can not safely or legally walk.
- Do not attempt to drive over curbs greater than 6.5cm in height. Doing so could cause your scooter to turn over, causing personal injury or damage to the scooter. For curbs less than 6.5cm, always approach them at an angle of 90 degrees and at a low speed.
- Do not drink or use a mobile phone when driving your scooter.
- Always keep your feet on the scooter when moving.
- Always slow down and proceed carefully when traveling over rough or uneven ground.
- For individuals with balance problems, practice getting on the scooter with the assistance of a qualified healthcare professional.
- Do not use an escalator to move a scooter between floors or serious injury could occur.
- Do not drive the scooter on an incline that has oil, water or ice film on it.
- Do not try to lift the scooter by its seat, tiller, rear chassis cover, or any removable parts. Any of these could cause injury to the user or damage to the scooter.
- Do not use parts or accessories that are not authorised by the original manufacturer of the scooter.
- Before sitting in or exiting the scooter, REMOVE the key from the ignition. This will ensure the POWER is off and the scooter can not move under its own power.
As a general precaution, always remove the key from the ignition while the scooter is not in use. This will prevent the use by untrained and unauthorised persons.
- Do not connect any foreign device to the scooter battery or charging port.
This could cause failure of the device, the scooter and personal injury.

SAFETY ADVICE (CONTINUED)

- Make sure the tiller is properly adjusted and in the locked position to suit the user to avoid damage and injury.
- It is not allowed to have any person sitting in the scooter when transported by a vehicle, otherwise any injury or damage that might result.
- Do not use the scooter in the rain, near a shower or in a damp bathroom. Direct exposure to rain or dampness could cause the scooter to electrically malfunction.
- Do not lean against or pull forward on the tiller while mounting or dismounting the scooter. Otherwise, injury may occur.
- Do not operate the unit or turn the key on while charging.
- Whenever a center bolt of the wheel assembly has been loosened, please replace a specified new bolt from authorized dealers and secure with a torque of 240 ± 5 kg-cm together with Loctite 271 adhesive (or equivalent).
- Charge batteries daily after use.
- Charging plug has to be removed from the scooter after charging.
- Always check the batteries charge remaining before operating the unit to ensure you have sufficient for your journey.
- Always charge the battery pack of the unit in a well ventilated area.
- If the unit went over or sank into deep water, please abandon the scooter and call emergency services for assistance.
- Always remove the key from the scooter when the unit is not in use or before charging, removing and installing the batteries. Otherwise, injury and/or damage to the unit or surrounding property may occur.
- Do not operate the unit in the way of exceeding to the product's specification listed in this owner's manual. Otherwise, injury and/or damage to the unit or surrounding property may occur. Doing so may also void your warranty.
- Do not use the speed lever before the key switch is turned on, or the operation will be prohibited until to turn key switch off and then on.
- Ensure the scooter is serviced every 12 months by an authorised IKON Mobility service provider to ensure it remains in safe working order. Failure to do so may cause catastrophic failure with possible injury and damage to surrounding property.

5.

EMI WARNING

Scooters may be susceptible to electromagnetic interference (EMI), which is a kind of interfering electromagnetic energy (EM) emitted from sources such as radio stations, TV stations, amateur radio (HAM) transmitters, two-way radio and mobile phones. The interference (from radio wave sources) can cause the scooter to release its brakes, move by itself, or move in unintended directions. It can also permanently damage the scooter's control system.

The sources of radiated EMI can be broadly classified into three types:

1. Hand-held portable transceivers (transmitters-receivers) with the antenna mounted directly on the transmitting unit. Examples include: citizens band (CB) radios, "walkie talkie", security, fire and police transceivers, cellular telephones, and other personal communication devices.

NOTE! Some mobile phones and similar devices transmit signals while they are ON, even when not being used.

2. Medium-range mobile transceivers, such as those used in police cars, fire trucks, ambulances, and taxis. These usually have the antenna mounted on the outside of the vehicle.

3. Long-range transmitters and transceivers, such as commercial broadcast transmitters (radio and TV broadcast antenna towers) and amateur (HAM) radios.

NOTE! Other types of hand-held devices, such as cordless phones, laptop computers, AM/FM radios, TV sets, CD players, and cassette players, and small appliances, such as electric shavers and hair dryers, so far as we know, are not likely to cause problems to the scooter.

Scooter Electromagnetic Interference (EMI)

Because EM energy rapidly becomes more intense as one moves closer to the transmitting antenna (source), the EM fields from hand-held radio sources (transceivers) are of special concern. It is possible to unintentionally bring high levels of EM energy very close to the scooter's control system while using these devices. This can affect scooter movement and braking. Therefore, the warnings listed below are recommended to prevent possible interference with the control system of the scooter.

EMI WARNING (CONTINUED)

WARNINGS

1. Do not operate hand-held transceivers (transmitters-receivers), such as citizens band (CB) radios, or turn ON personal communication devices, such as mobile phones, while the scooter is turned ON.
2. Be aware of nearby transmitters, such as radio or TV stations, and try to avoid coming close to them.
3. If unintended movement or brake release occurs, turn the scooter OFF as soon as it is safe.
4. Be aware that adding accessories or components, or modifying the scooter may make it more susceptible to EMI.


NOTE! There is no easy way to evaluate the overall immunity of the scooter.

5. Report all incidents of unintended movement or braking to your dealer, and note whether there are sources of EMI nearby.

WARNING: The original manufacturer and the importer of the scooter is not responsible for damage or injury incurred due to improper and unsafe use of our scooter.

IMPORTANT NOTE

If you are ever unsure about any aspect of the PRESTO Mobility Scooter please do not use and contact your supplier for support.

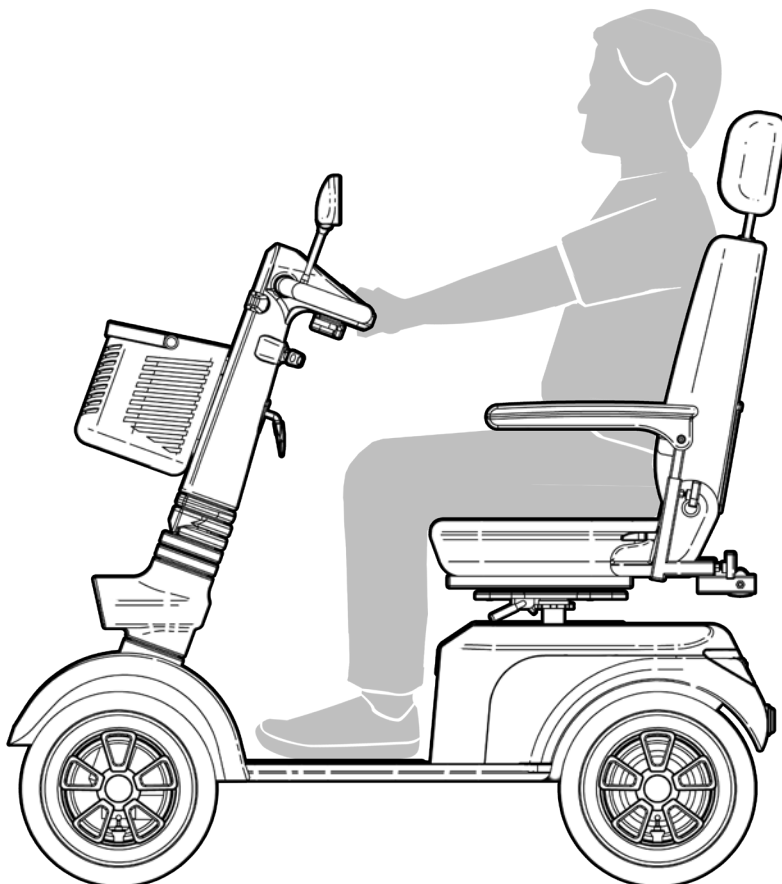


7.

ASK FOR THE BRAND


ikonmobility.com.au

UNPACK and INSPECT SUPPLIED PARTS

We recommend that you thoroughly inspect all the supplied parts prior to assembling and using the PRESTO Mobility Scooter.

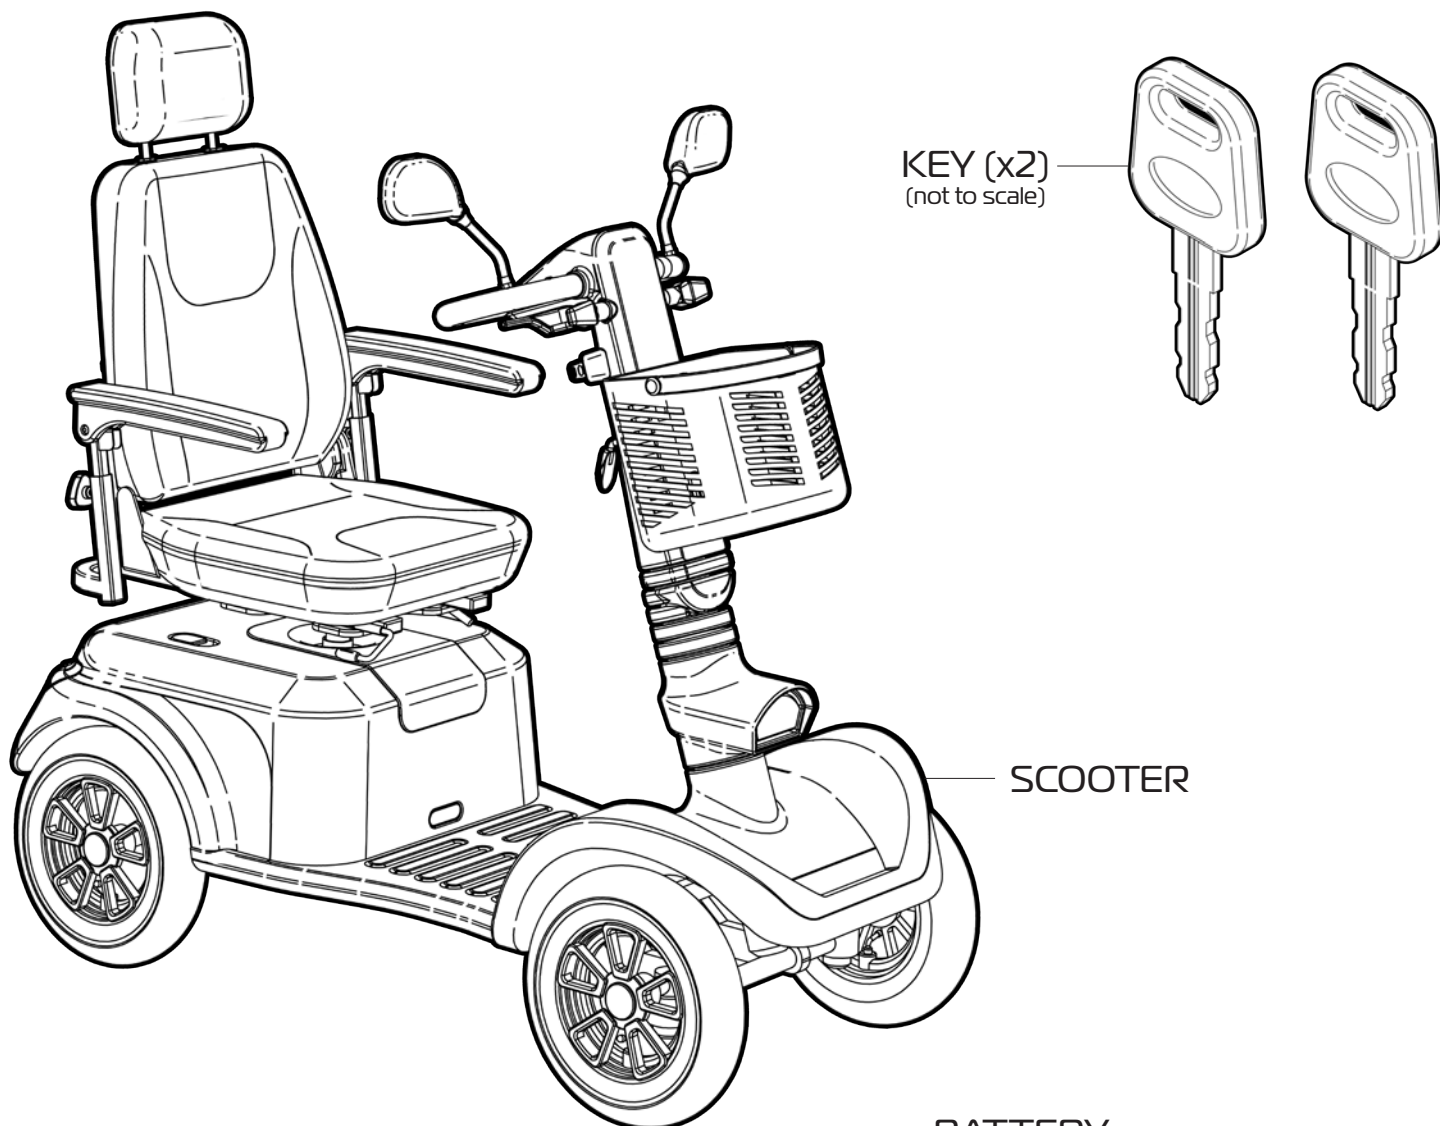


Please take care when unpacking the product and removing any protective packing materials. If you see any damage or suspect a fault, **DO NOT USE THE PRODUCT** and contact your supplier for support.

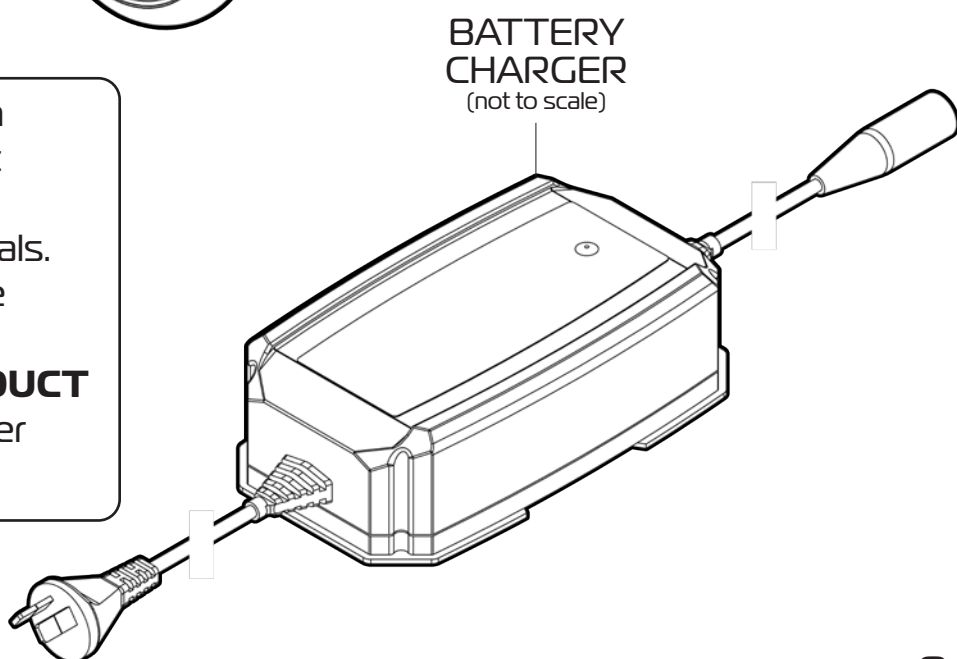

GLOSSARY OF SCOOTER

Please become familiar with the PRESTO Mobility Scooter and the terms used when describing certain parts of the product.

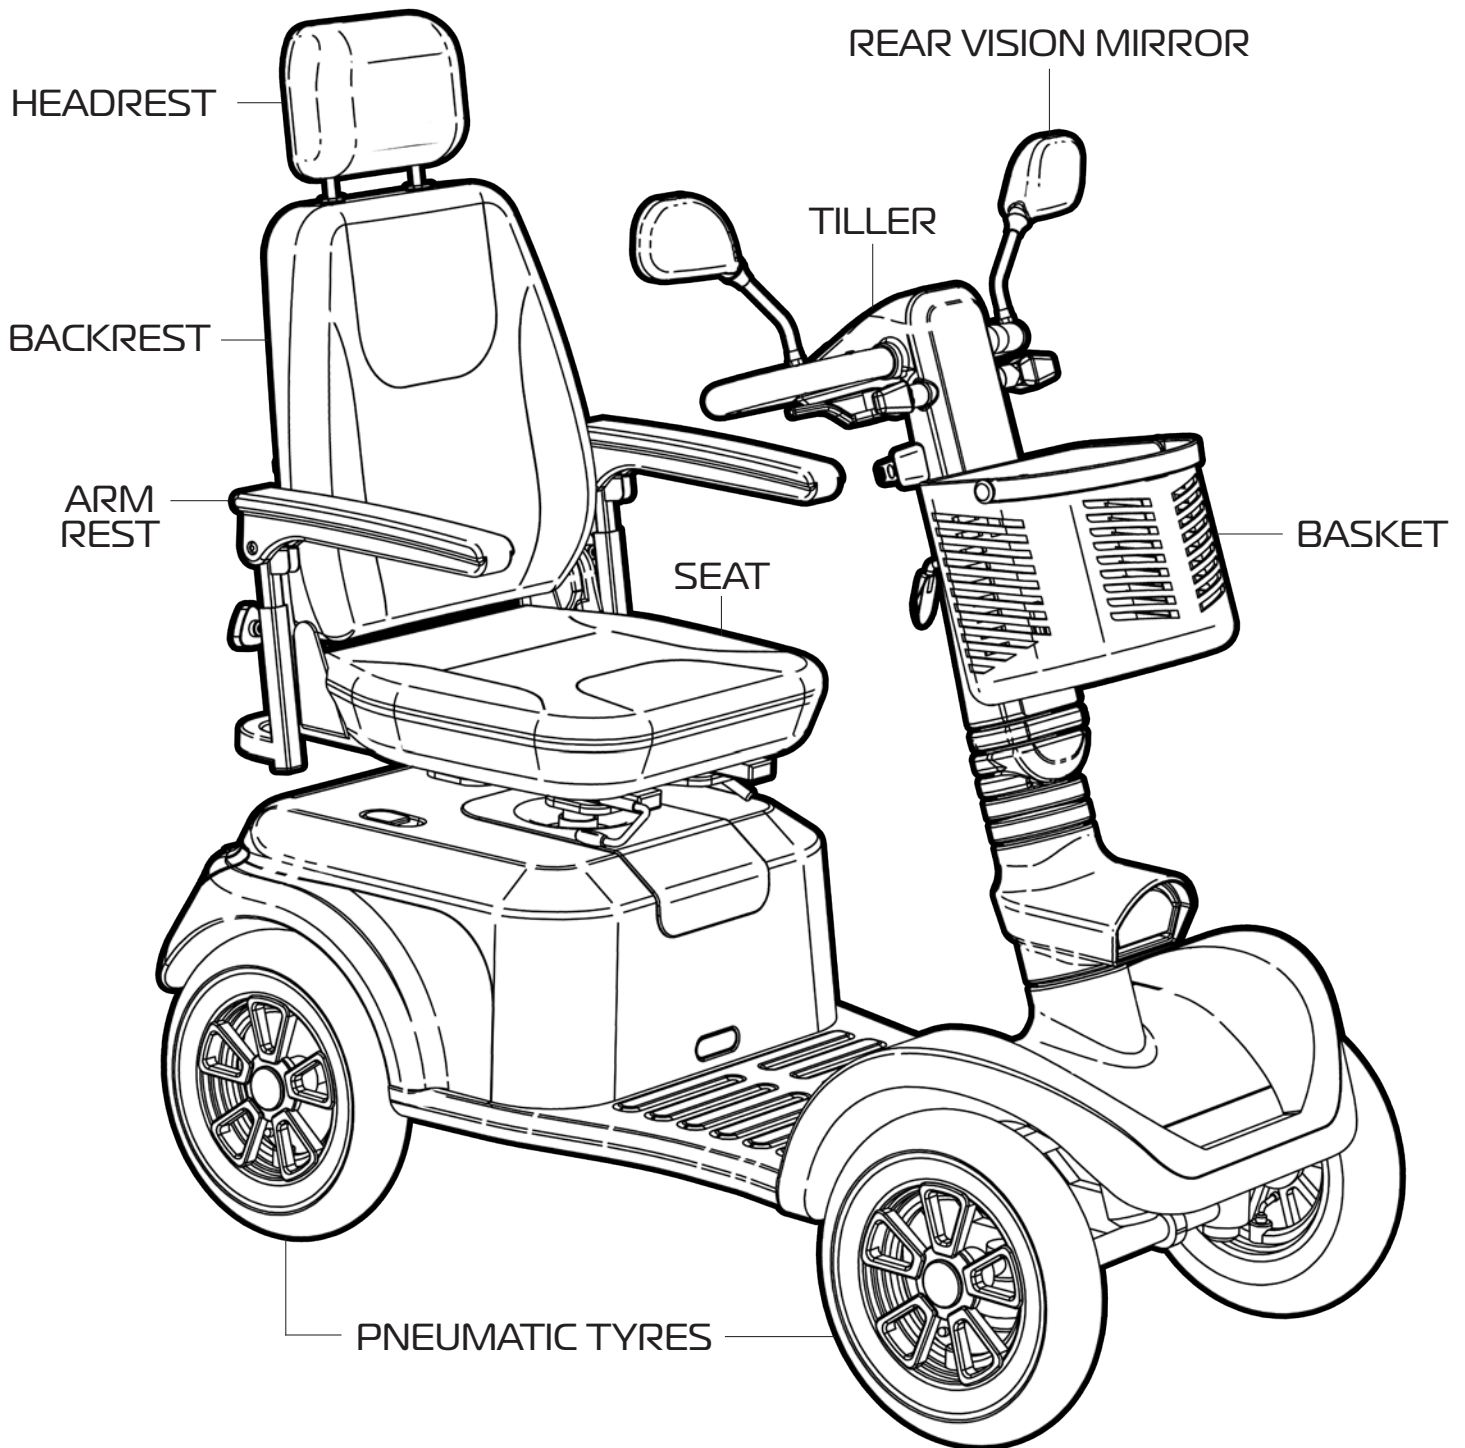

IMPORTANT NOTE

If you are ever unsure about any aspect of the PRESTO Mobility Scooter please do not use and contact your supplier for support.

9.


ASK FOR THE BRAND

ikonmobility.com.au

PREPARING THE SCOOTER FOR USE

It is very important that the PRESTO Mobility Scooter is set up to suit the user so they feel comfortable and have full control when operating the scooter. Refer to the following pages for instruction on how to:

- **Rotate up armrests** (for access)
- **Rotate seat** (for access)
- **Adjust seat height**
- **Adjust headrest height**
- **Adjust backrest angle**
- **Adjust seat position**
- **Adjust armrest width**
- **Adjust armrest height**
- **Adjust armrest angle**
- **Adjust tiller angle**

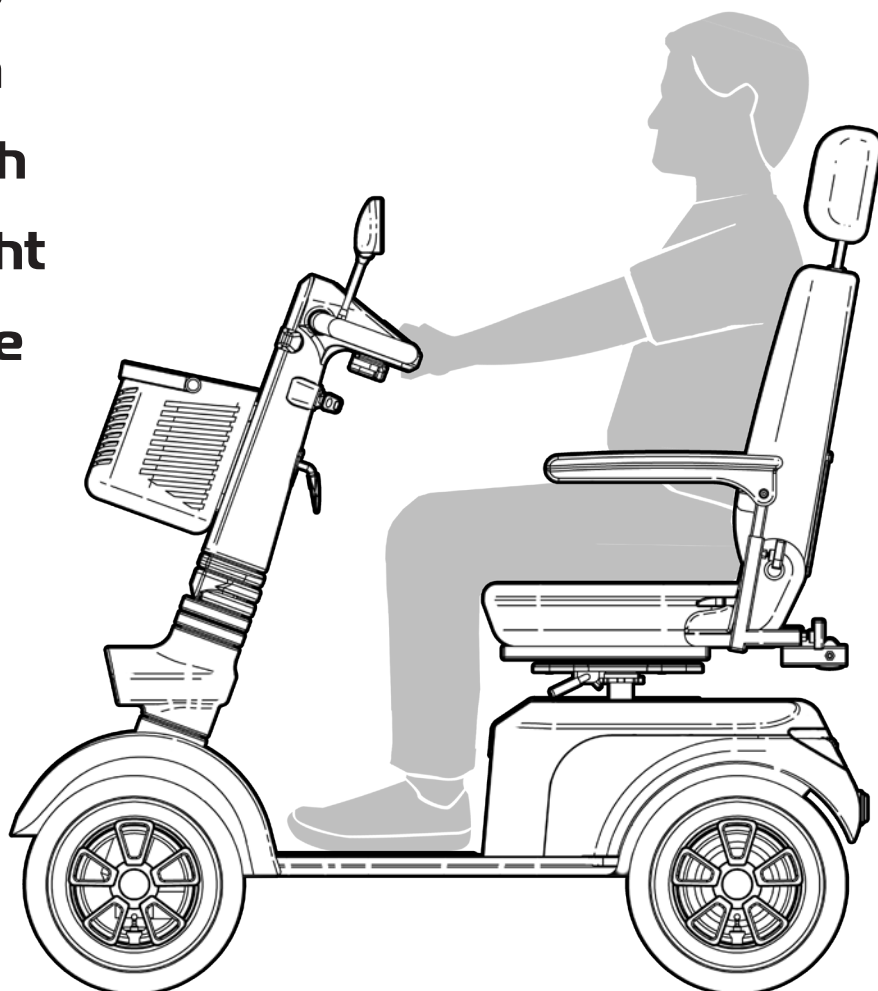


IMPORTANT NOTE

If you are ever unsure about any aspect of setting up the PRESTO Mobility Scooter for use please do not use and contact your supplier for support.


ROTATE UP ARMRESTS

The armrests on the PRESTO Mobility Scooter can be rotated up to allow for improved access when going to sit on the scooter.

Please follow these instructions to rotate the armrest on the scooter:

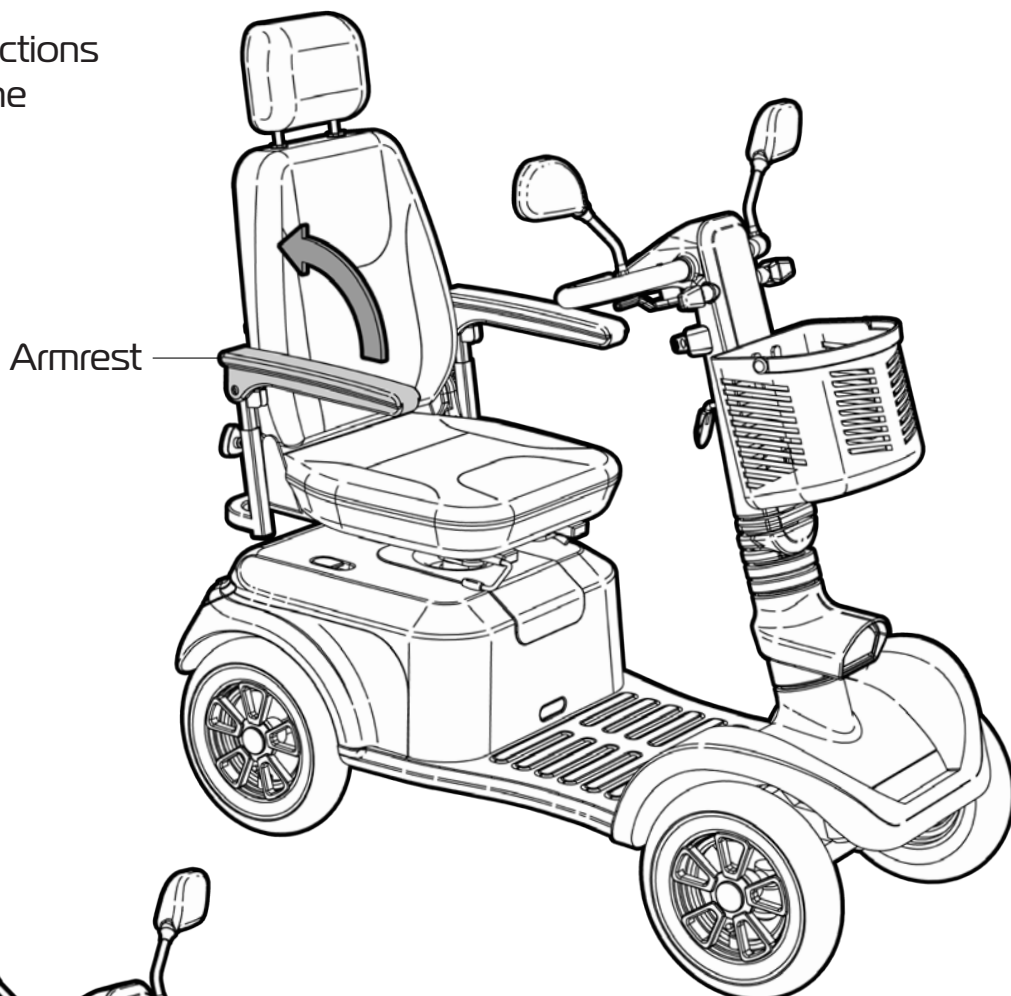

Step 1:
Rotate up the
required armrest.

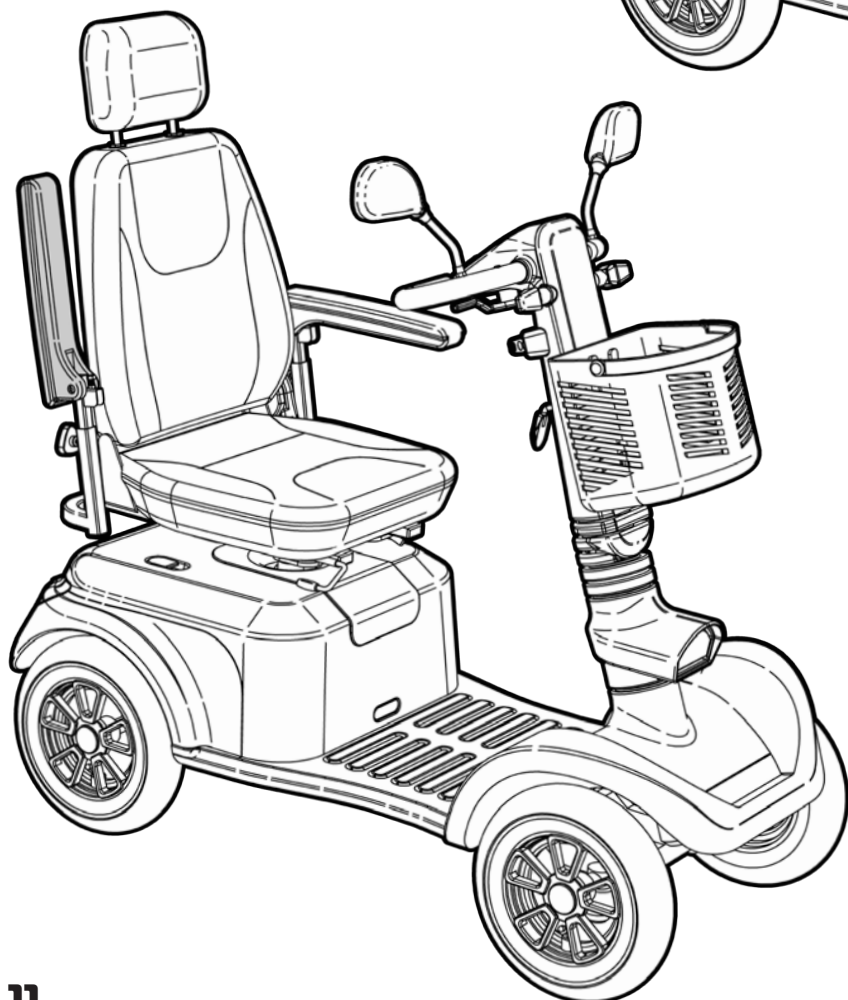

Step 2:
Sit down on the
seat and lower
the armrest down.

IMPORTANT NOTE

Please keep fingers clear of armrest pivot when lowering as a pinch point does exist.

ROTATE SEAT

The seat on the PRESTO Mobility Scooter can be rotated around to allow for improved access when going to sit on the scooter.

Please follow these instructions to rotate the seat on the scooter:



We recommend that you sit on the seat to rotate the chair position.

Step 1:

Pull up the seat lever and at the same time begin to rotate the seat in the required direction.

Step 2:

Release the seat lever and continue to rotate seat to the required angle.

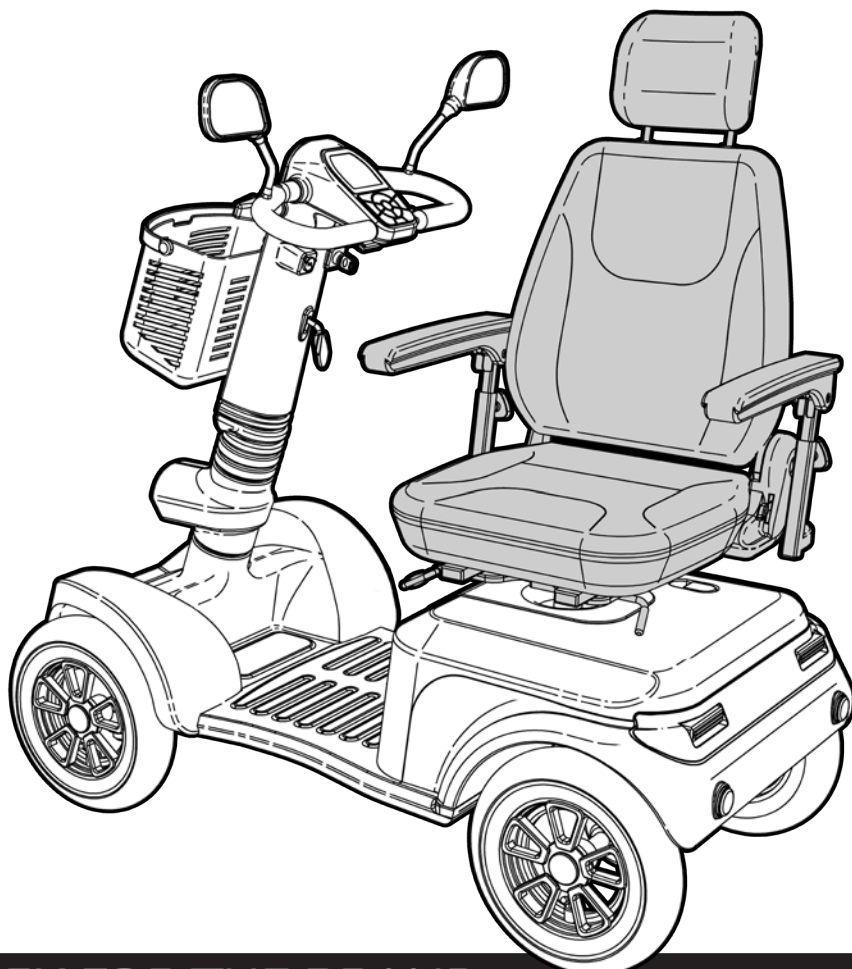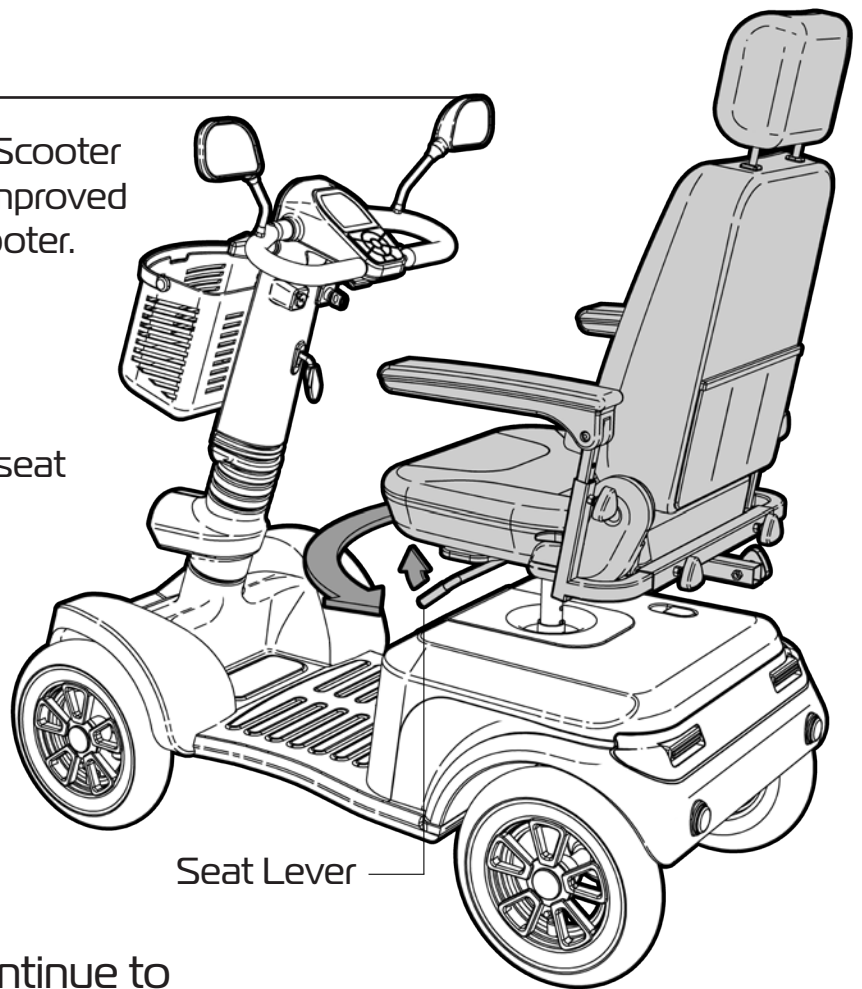

Step 3:


Sit down on the seat. Pull up on the seat lever and rotate the seat back to be inline with the scooter.

IMPORTANT NOTE

Ensure the seat is locked into position at the required angle prior to sitting.

ADJUST SEAT HEIGHT

The PRESTO Mobility Scooter has four seat height settings. Please follow these instructions to adjust the seat height as required:

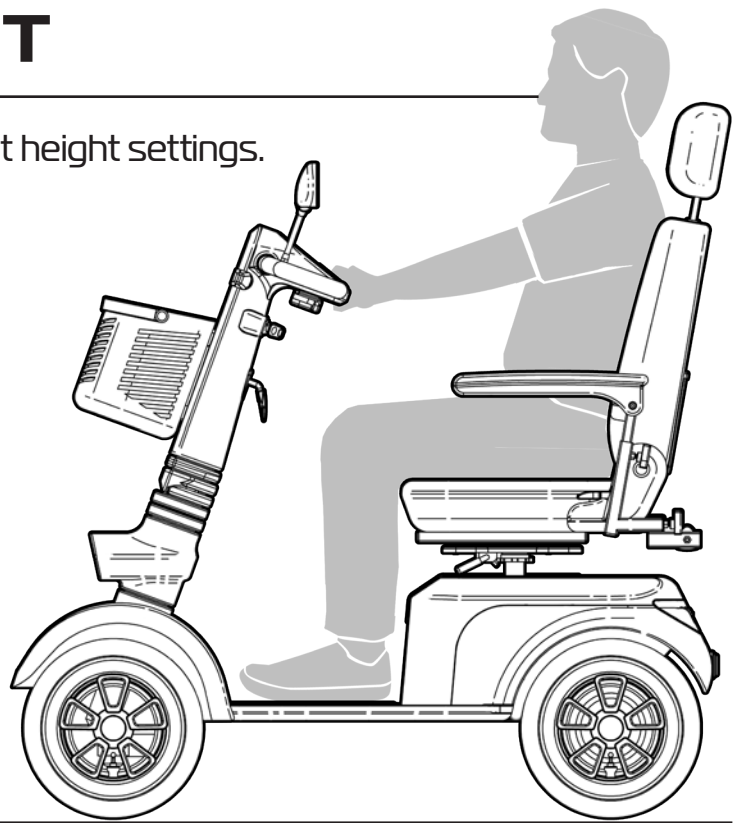


SET UP GUIDELINE

To promote the correct sitting posture users thighs should be at 90° to the chest.

Step 1:

Pull up the seat lever and at the same time rotate the seat away by 45° or 90°

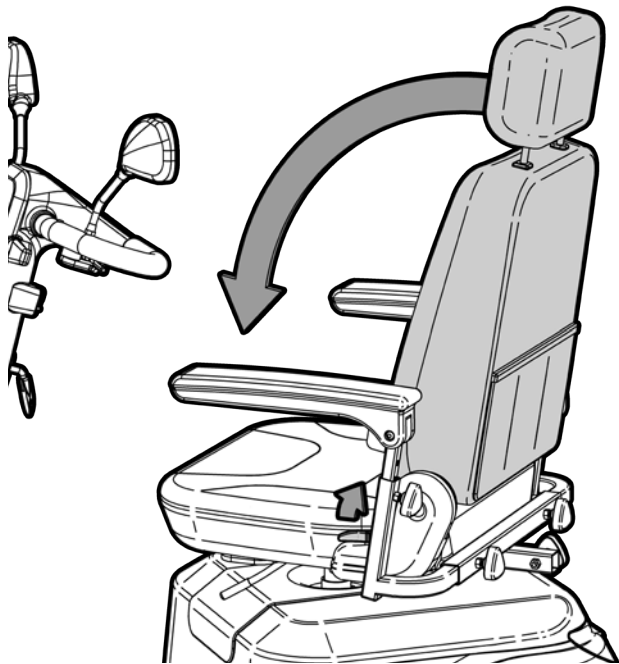

Step 2:

Pull up the backrest lever and at the same time rotate the backrest down to touch the seat.

13.

IMPORTANT NOTE


We recommend that two people lift the seat as it weighs 21kg.



Step 3:

Pull up the seat lever and at the same time lift the seat off the scooter.

ADJUST SEAT HEIGHT (CONTINUED)

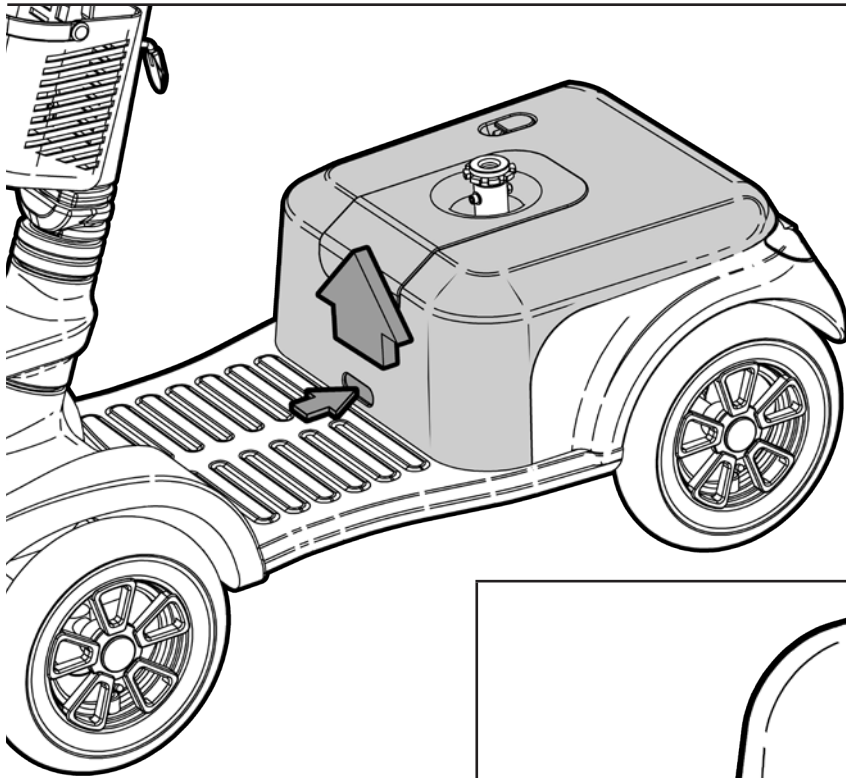


Step 4:

Press the tab in and lift off the back cover. Carefully set the cover on the ground so it does not scratch.

Note:

Some parts under cover are not shown for clarity.

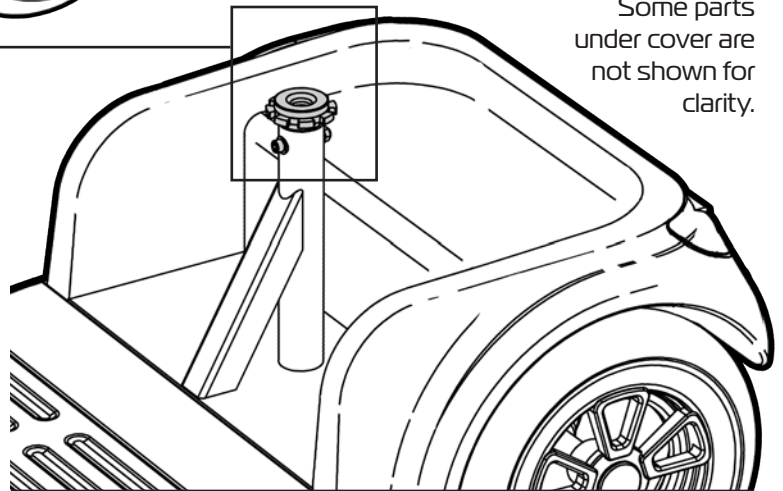


Seat Heights (Seat to footrest)

Hole 1: **450mm**

Hole 2: **475mm**

Hole 3: **500mm**

Hole 4: **525mm**

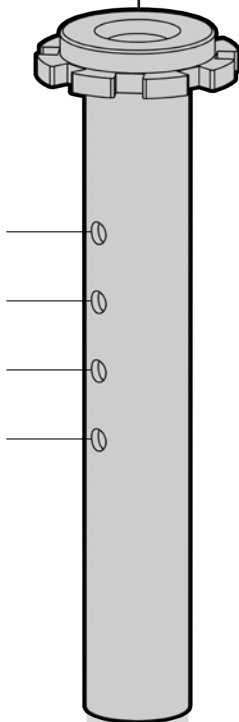

IMPORTANT NOTE

We recommend that the scooter supplier or an experienced technician makes any required adjustments to the chair height.

Tools required to make the adjustment are not provided.

Step 5:

Remove fixing.

Step 6:


Determine required height.

Step 7:

Fix in position.

Step 8:

Refit back cover.

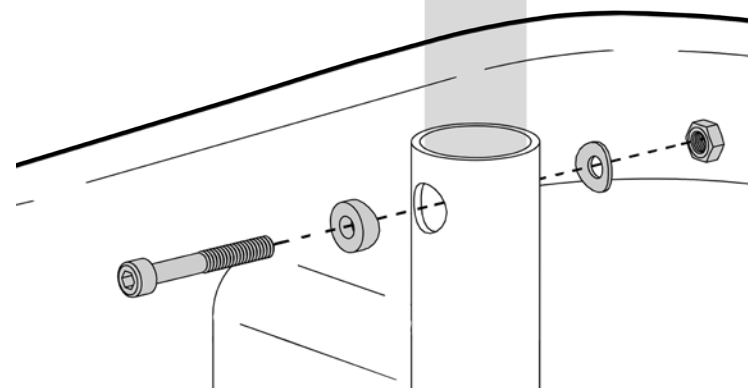


ADJUST SEAT HEIGHT (CONTINUED)

Step 9:

Using the correct lifting technique pull up the seat lever and lift up the seat at the same time.


IMPORTANT NOTE

We recommend that two people lift the seat as it weighs 21kg.

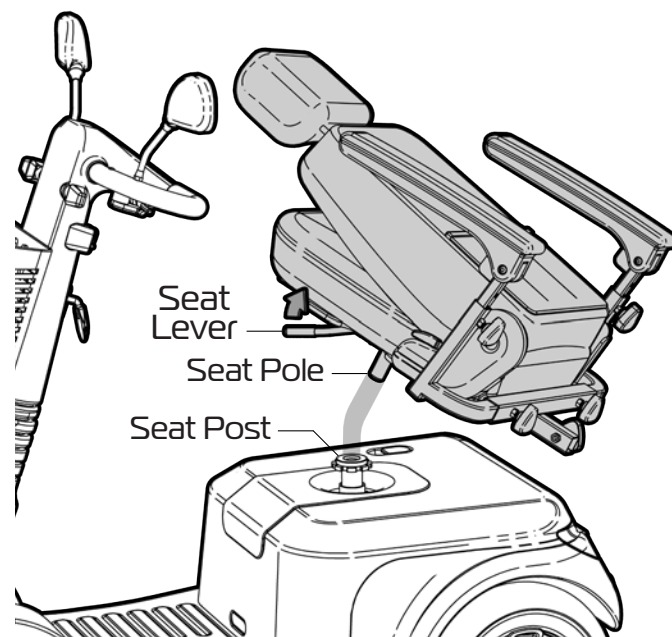


Step 10:

Approach the scooter at an angle and tilt the seat up so you can visually see the seat pole and the seat post. With the seat lever still pulled up slide the seat pole down into the seat post.

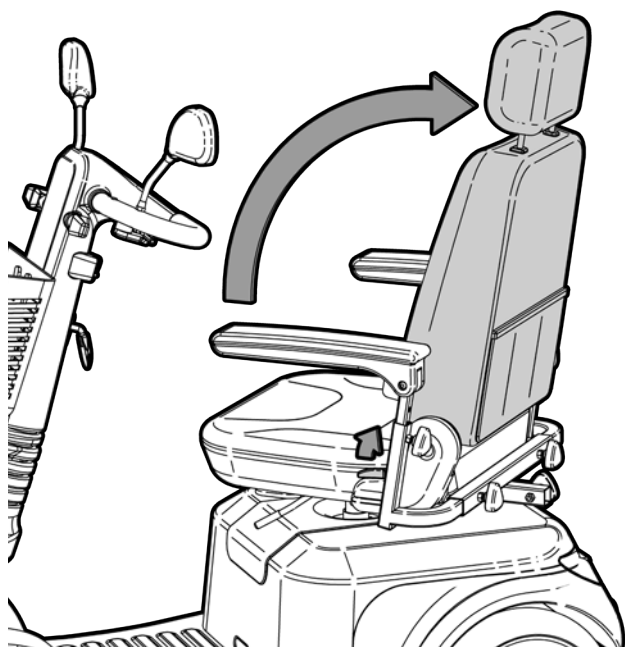

Step 11:

Pull up the backrest lever and at the same time rotate the backrest up to the required seating angle.

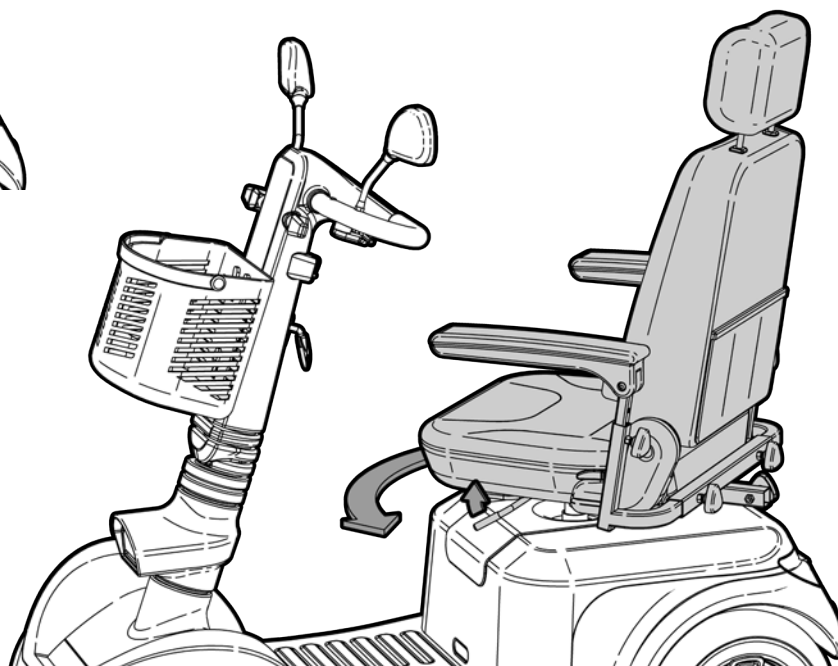

Step 12:

Pull up the seat lever and at the same time rotate the seat back inline with the scooter.


ADJUST HEADREST

The PRESTO Mobility Scooter has a height adjustable headrest .

Please follow these instructions to adjust the headrest height as required:


Step 1:

Whilst pushing in the button slide the headrest to the required position.

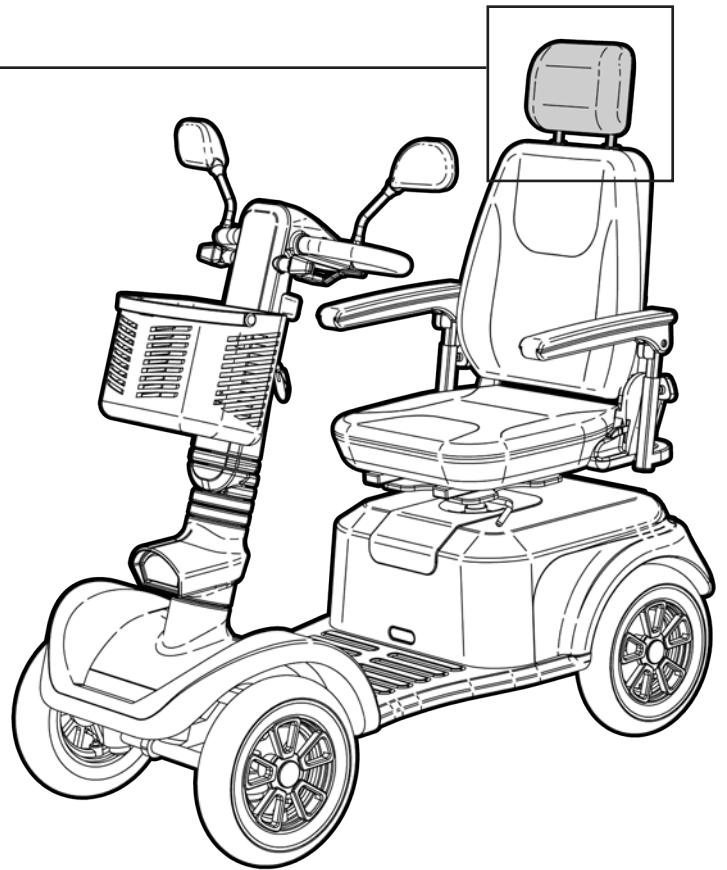

Step 2:

Release the button to set the position.

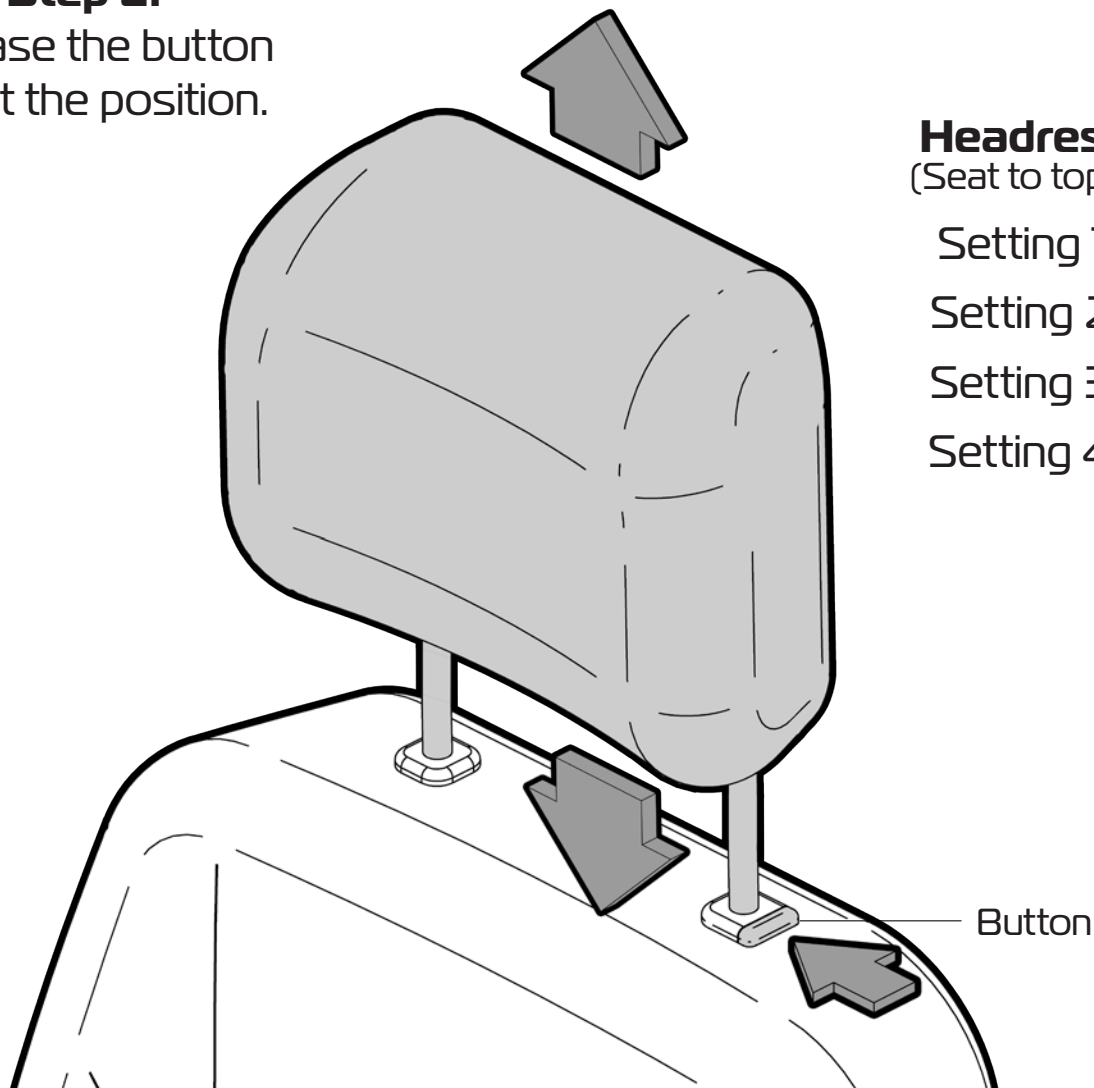

Headrest Heights

(Seat to top of headrest)

Setting 1: **705mm**

Setting 2: **720mm**


Setting 3: **735mm**

Setting 4: **750mm**


ADJUST BACKREST ANGLE

The PRESTO Mobility Scooter has an angle adjustable backrest.

Please follow these instructions to adjust the backrest angle as required:

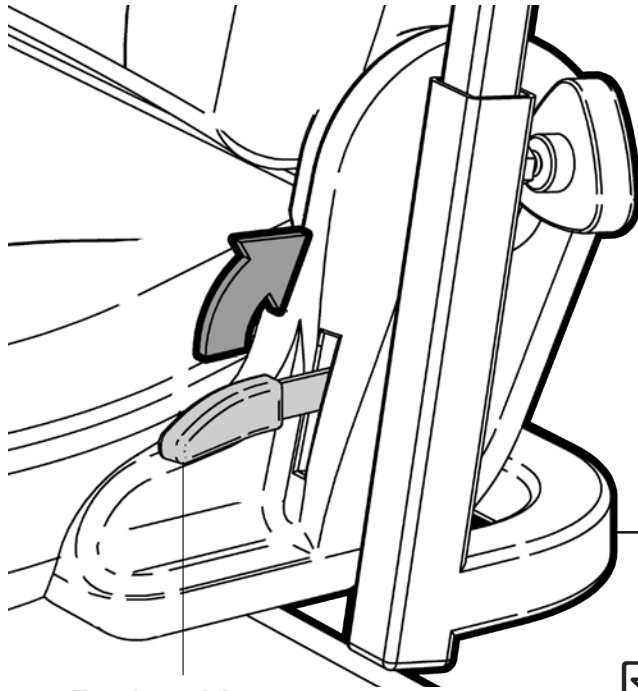

Backrest lever

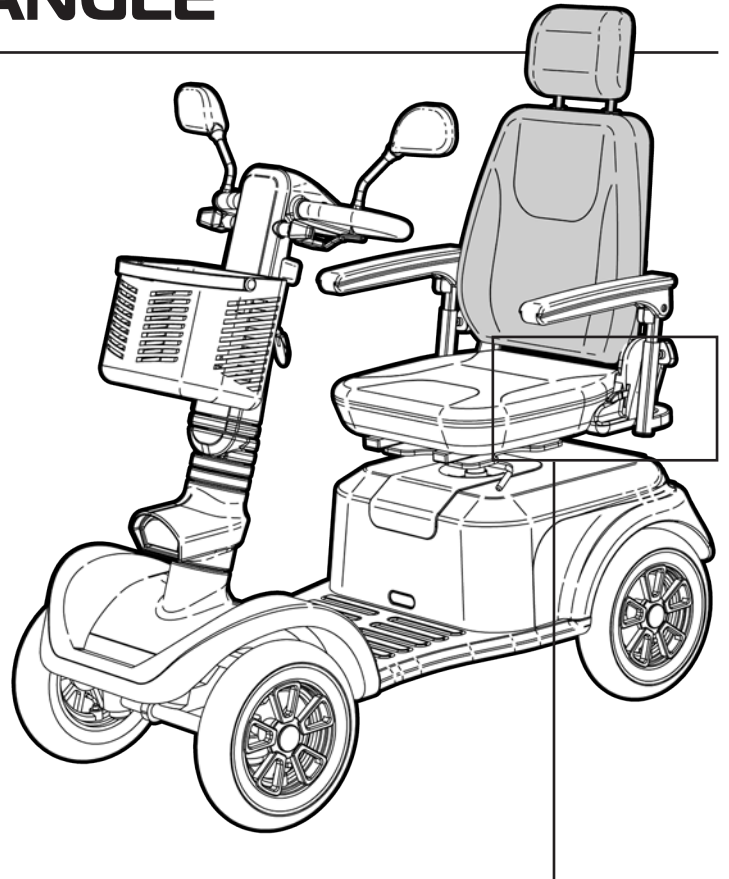

Step 1:


Whilst lifting up the backrest lever
Rotate the backrest to the required angle.

Step 2:

Release the backrest lever to set
the backrest angle.

SET UP GUIDELINE

To promote the correct sitting posture the tiller should be within easy reach when the users back is leaning on the backrest.


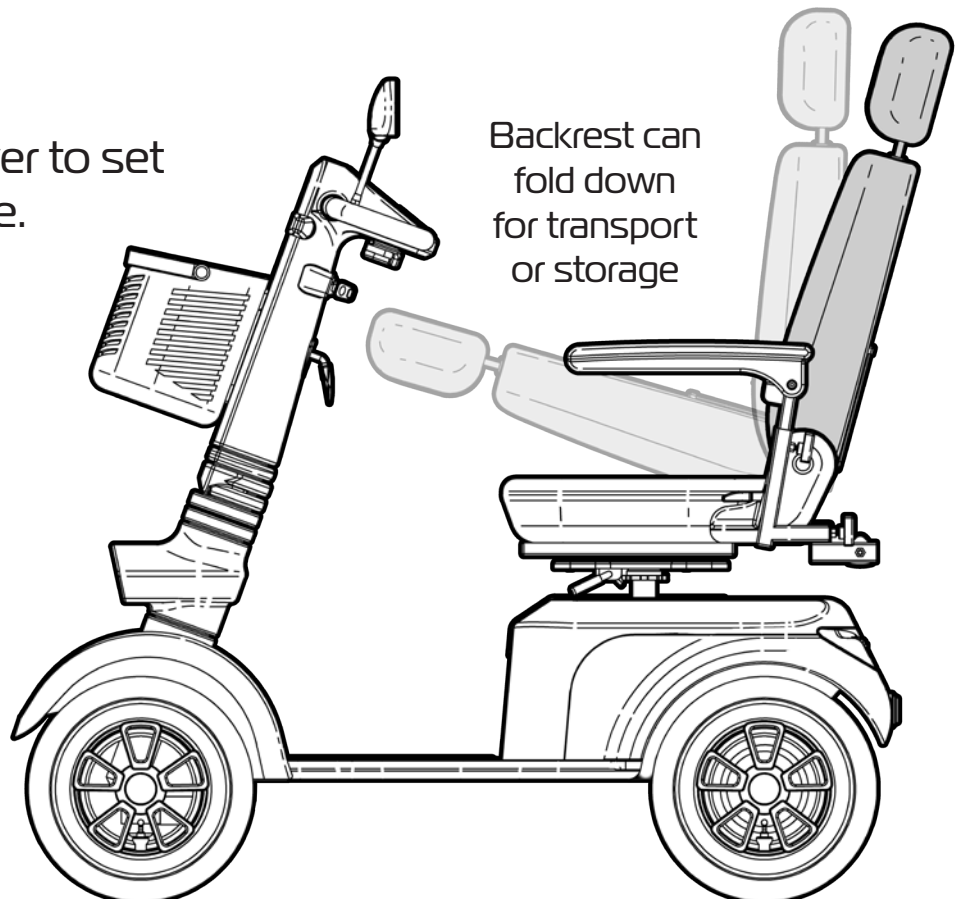


Backrest can
fold down
for transport
or storage

ADJUST SEAT POSITION


The PRESTO Mobility Scooter has a sliding seat that can move closer or further away from the tiller. Please follow these instructions to position the seat as required:

We recommend that you sit on the seat to adjust the seat position.

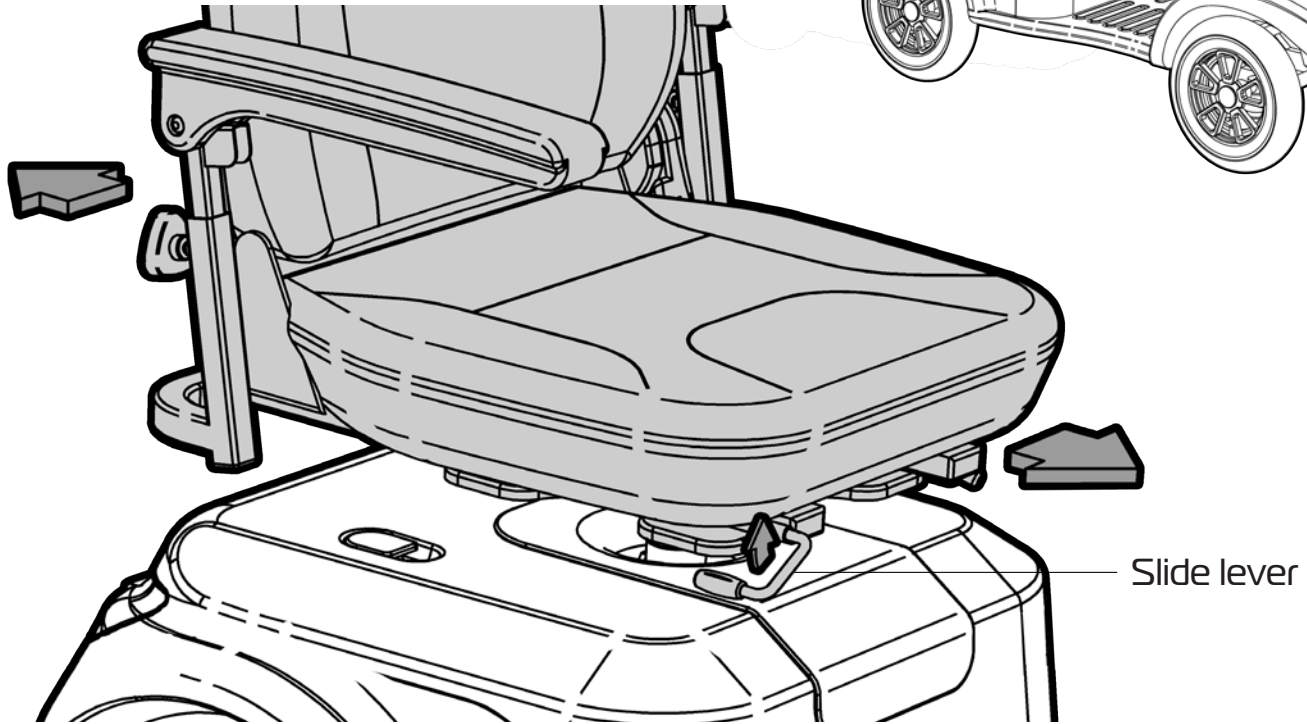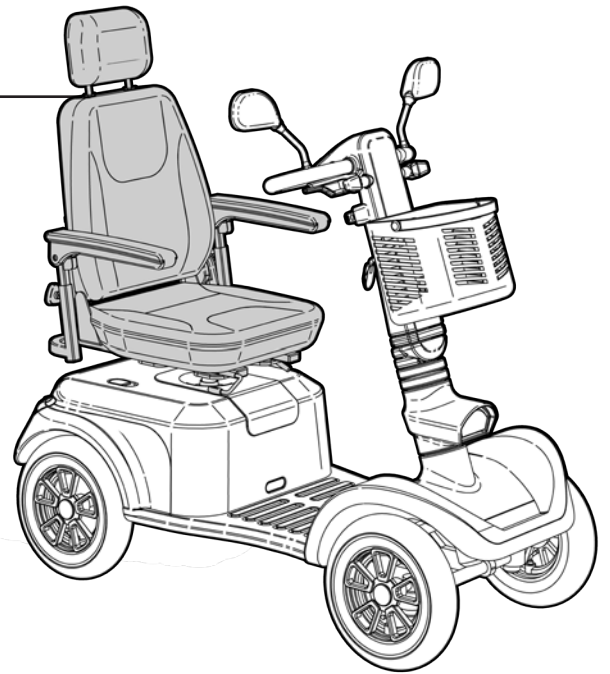

Step 1:

Whilst lifting up the slide lever slide the seat to the required position.

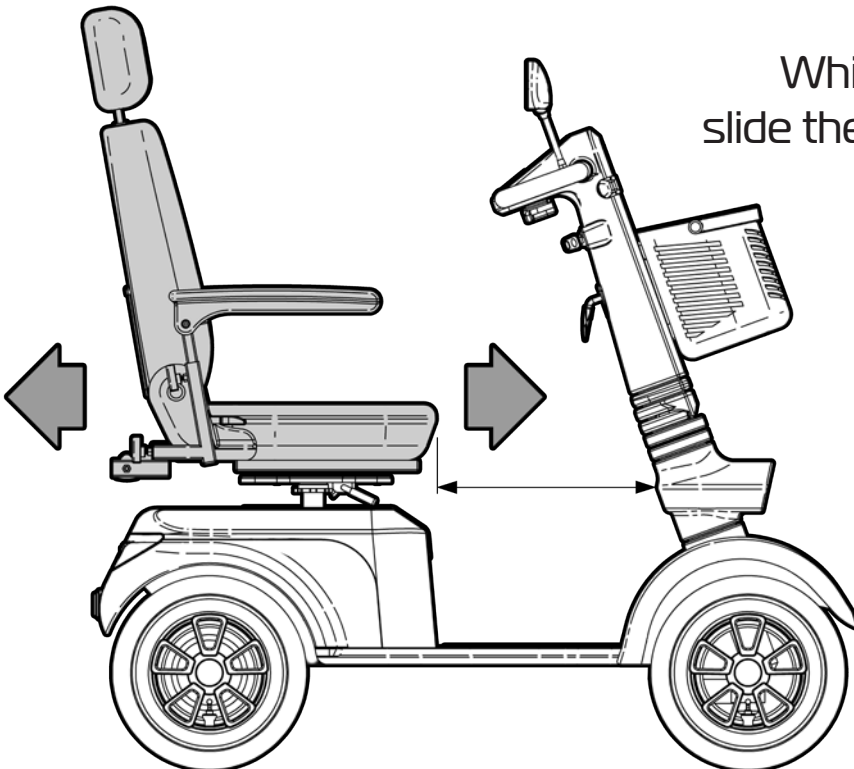

Step 2:

Release the slide lever to set the seat in place.

Seat Position
(from tiller to front of seat)



MINIMUM: **250mm**

MAXIMUM: **350mm**


18.

ADJUST ARMREST WIDTH

The PRESTO Mobility Scooter has width adjustable armrests. Please follow these instructions to adjust the armrest width as required:

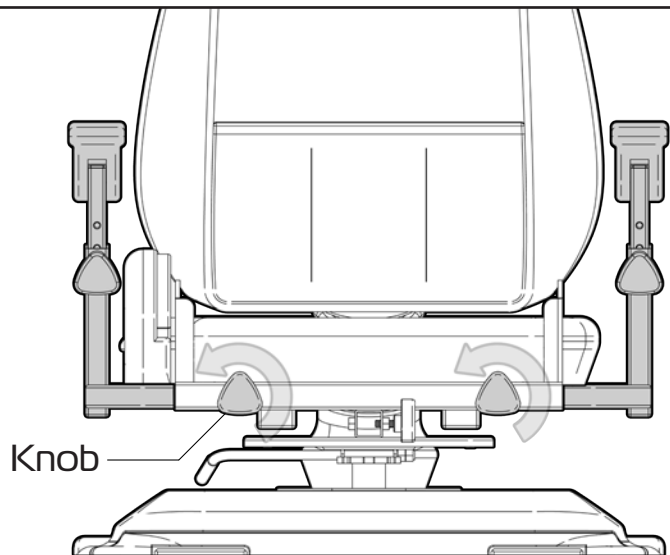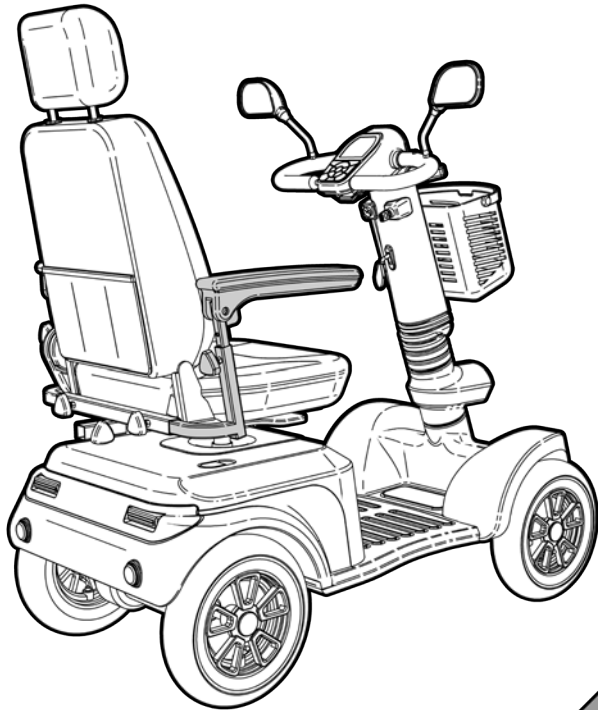


Step 1:
Undo knobs.

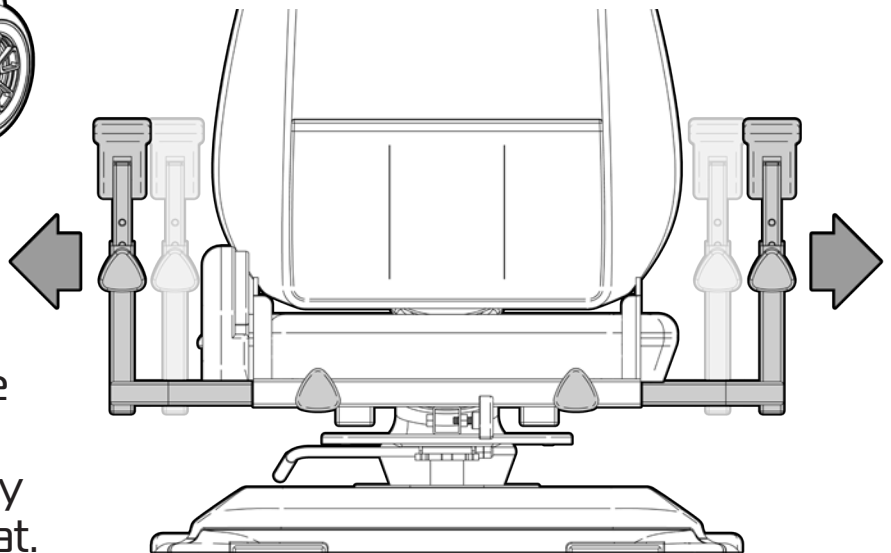

Step 2:
Slide out armrests to the required width setting. Ensure armrest are evenly spaced away from the seat.

Armrest Width
(In between armrests)
MINIMUM: **500mm**
MAXIMUM: **700mm**


Step 3:
Tighten knobs to secure armrests in place.

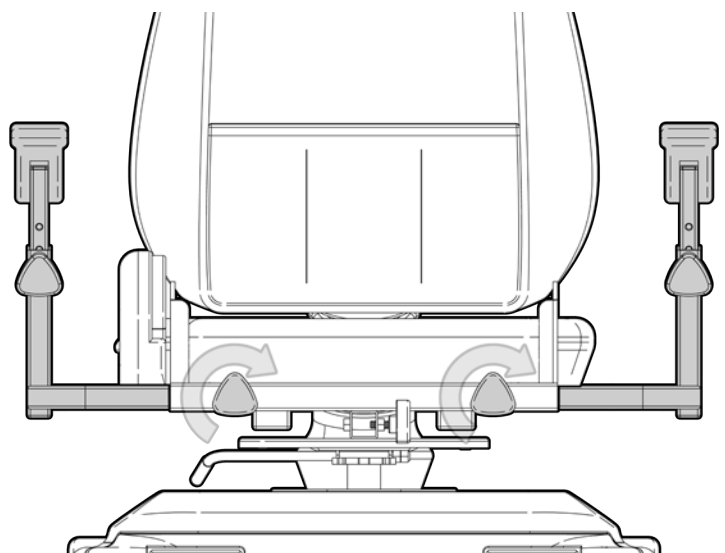

ADJUST ARMREST HEIGHT


The PRESTO Mobility Scooter has height adjustable armrests.

Please follow these instructions to adjust the armrest height as required:

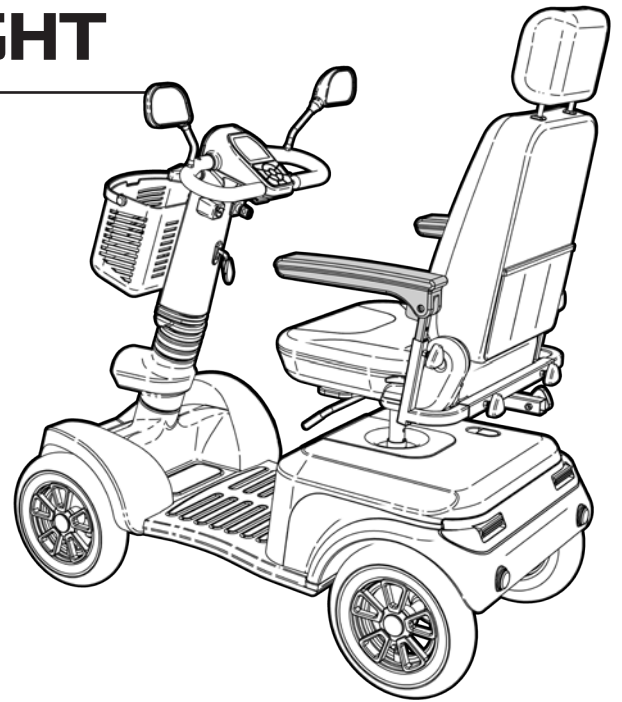


Step 1:

Whilst holding the armrest undo knob.

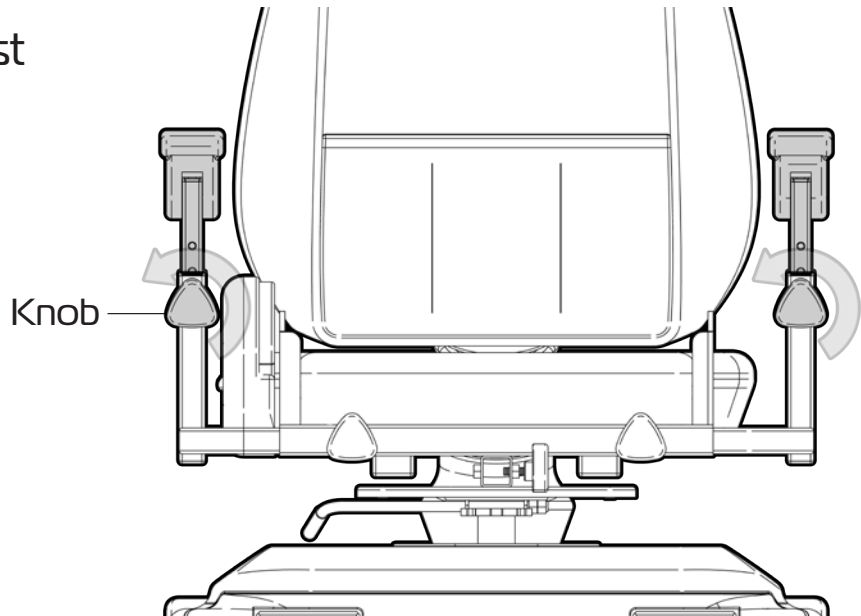

Step 2:

Raise or lower the armrest to the required height setting and at the same time tighten the knob to hold in place.

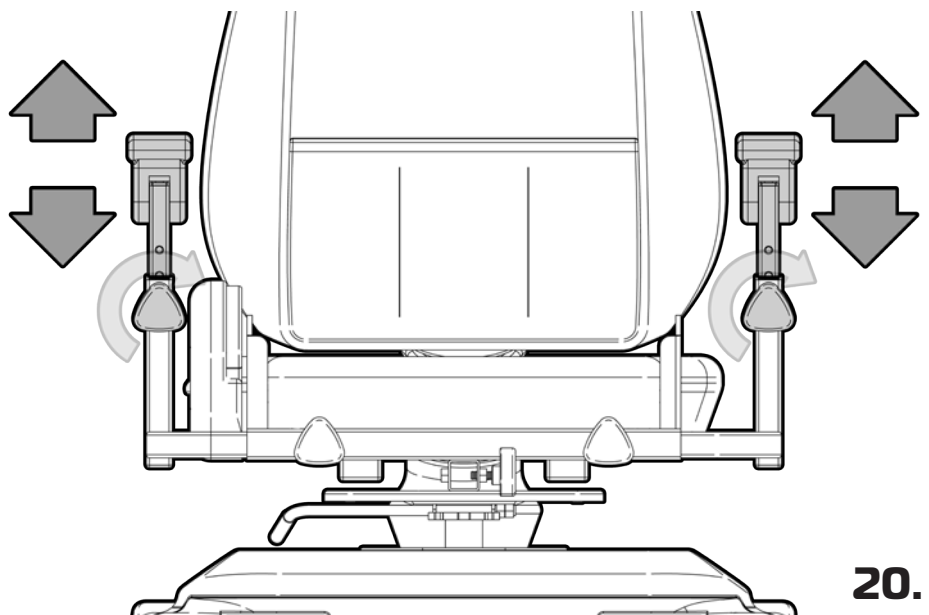

Armrest Height
(top of seat to top of armrest)

Setting 1: **190mm**

Setting 2: **215mm**



Setting 2: **240mm**

ADJUST ARMREST ANGLE

The PRESTO Mobility Scooter has angle adjustable armrests.

Please follow these instructions to adjust the armrest angle as required:

Step 1:
Rotate armrest up.

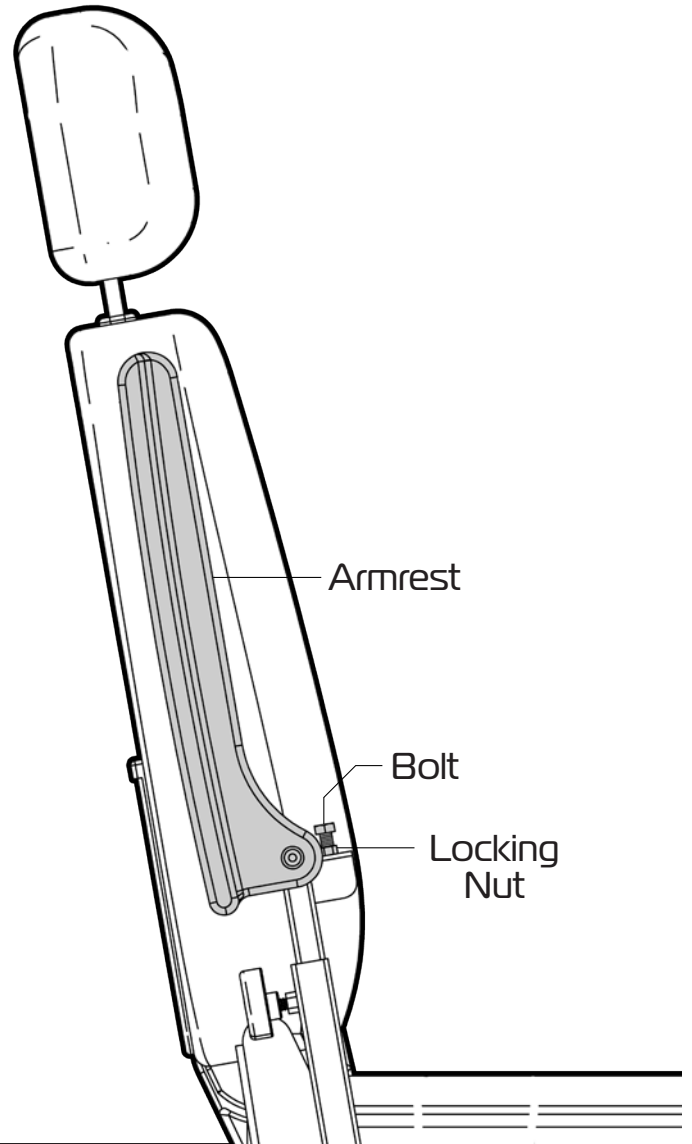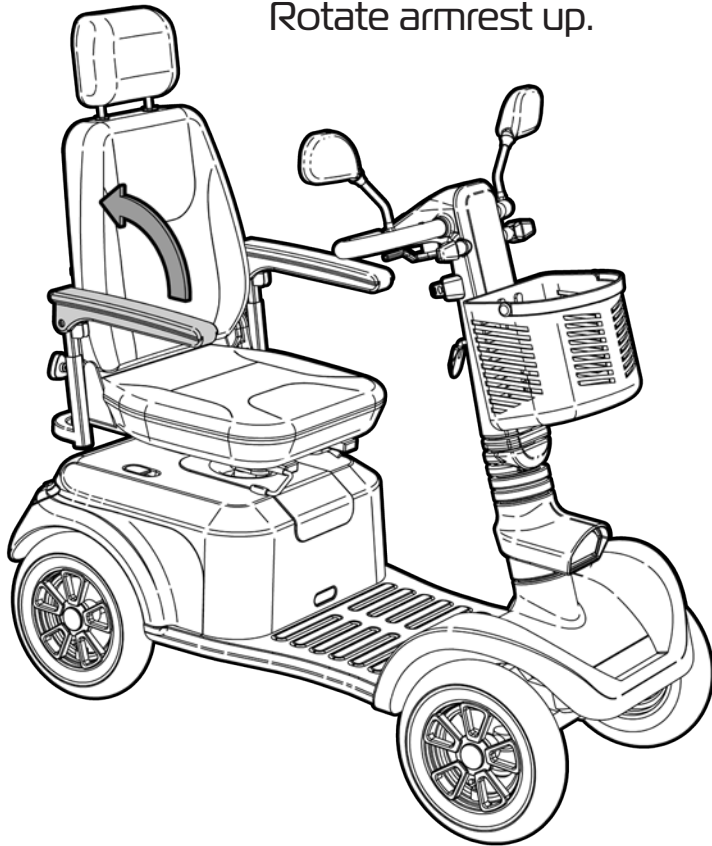

IMPORTANT NOTE

We recommend that the scooter supplier or an experienced technician makes any required adjustments to the armrest angle.


Tools required to make the adjustment are not provided.

Step 2: Undo locking nut.

Step 3: Wind bolt in or out to change height of armrest angle stop.

Step 4: Rotate armrest down to check angle.

Step 5: Rotate armrest up and tighten locking nut.

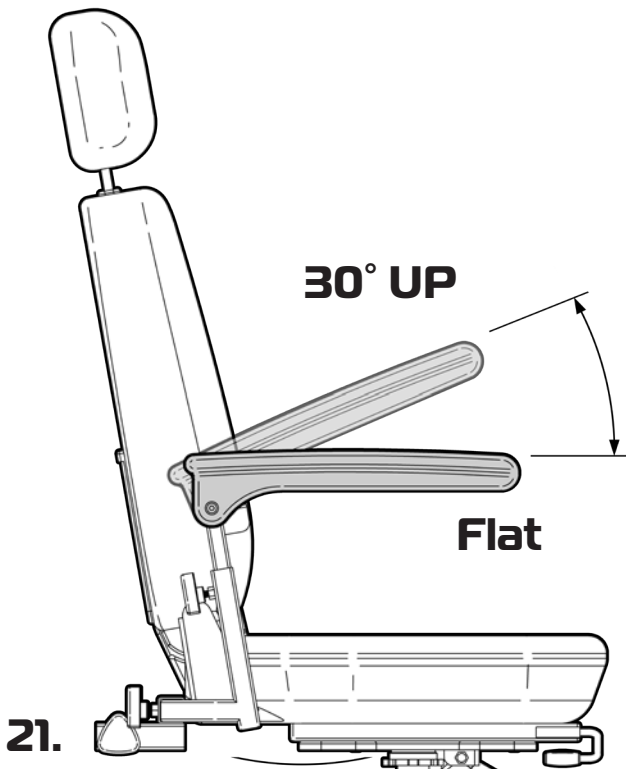


ADJUST TILLER ANGLE

The PRESTO Mobility Scooter has an angle adjustable tiller.

Please follow these instructions to adjust the tiller to the required angle:


SET UP GUIDELINE

To promote the correct sitting posture: The tiller should be within easy reach when the users back is leaning on the backrest.

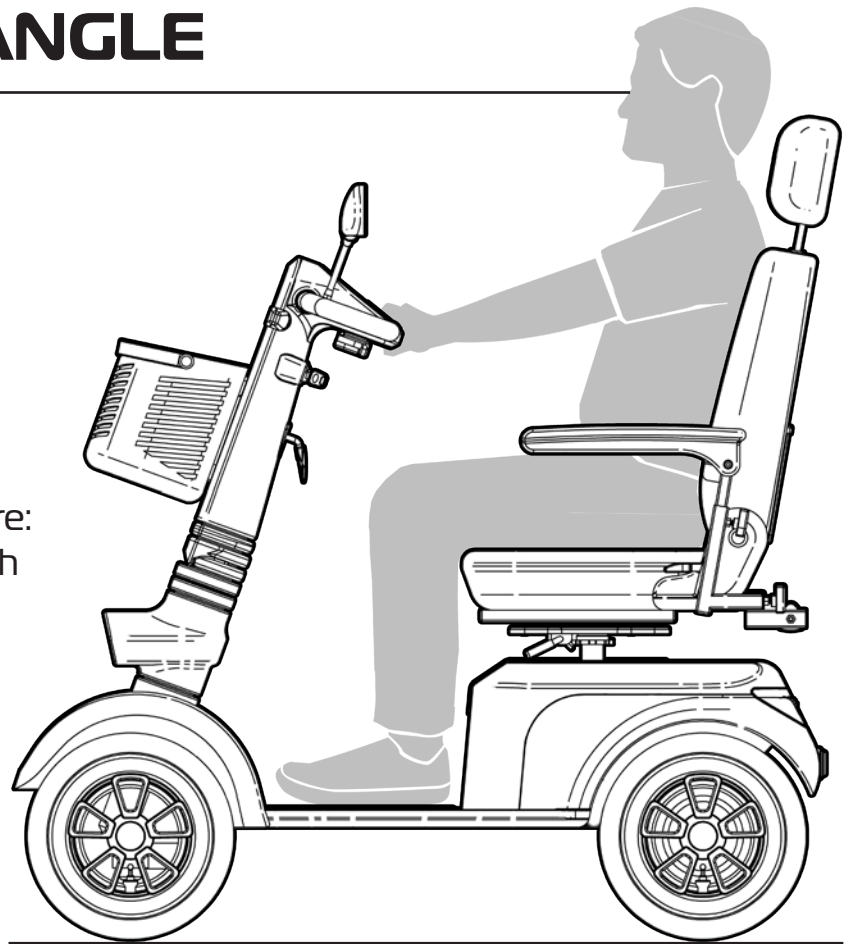

Step 1:

Pull the tiller lever toward you and at the same time adjust the tiller to the required angle.

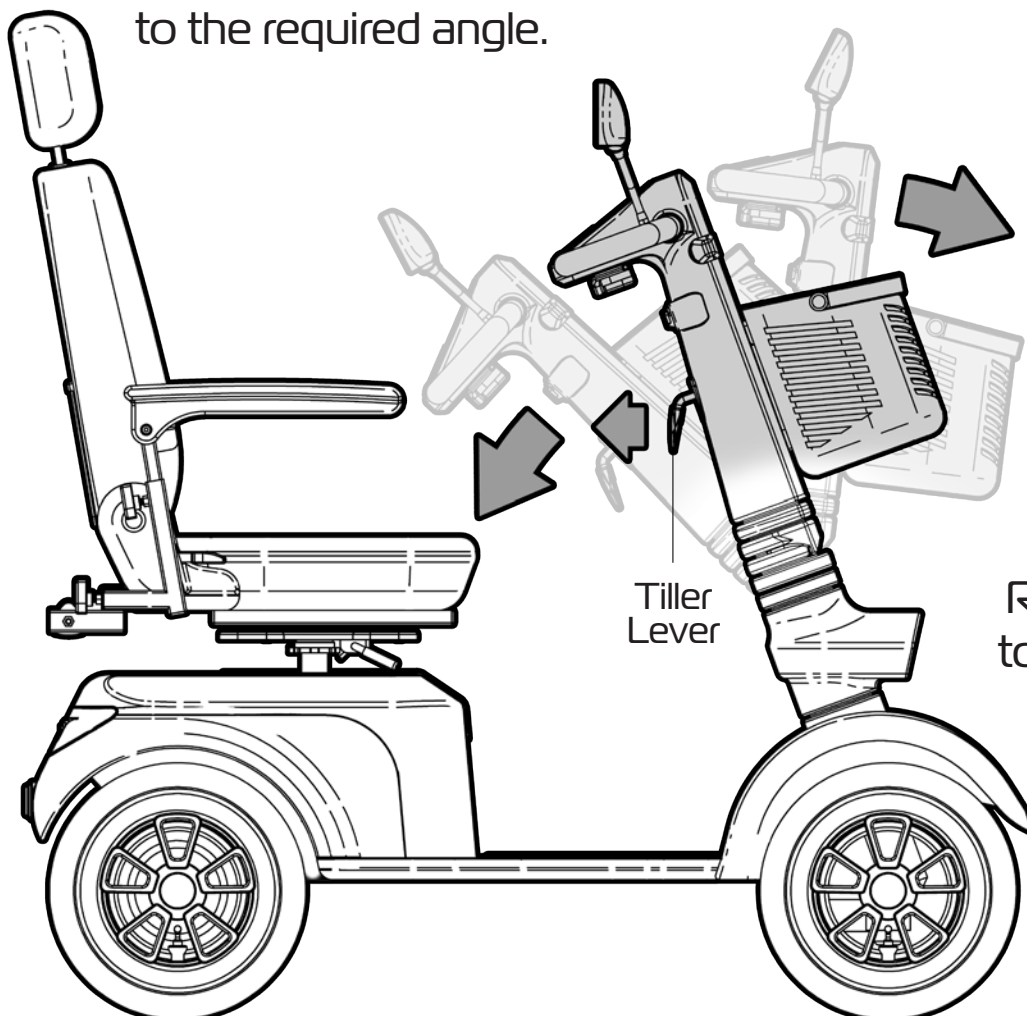


Step 2:

Release the tiller lever to set the tiller in place.

INSPECT THE SCOOTER PRIOR TO USE

Before using the PRESTO Mobility Scooter please perform the following tasks:

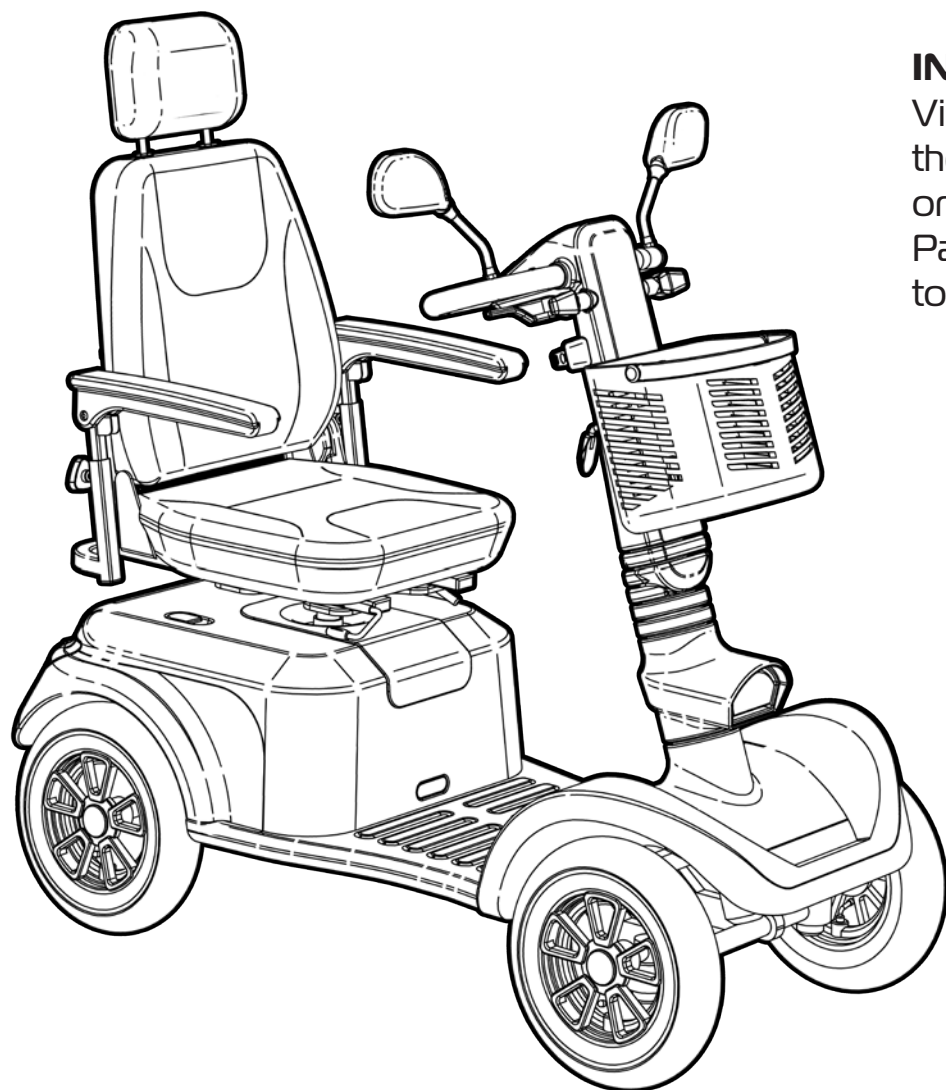

INSPECT THE SCOOTER

Visually and physically look over the scooter for signs of damage or wear prior to use.

Pay particular attention to the following areas:

- Tyres
- Seat
- Backrest
- Tiller
- Display
- Handgrips
- Speed paddle
- Other aspects....

Check to ensure all parts have been set up correctly and are securely in place prior to use.



IMPORTANT NOTE

If you suspect damage or any fault **DO NOT USE** the scooter! and contact your supplier for service support.

IMPORTANT NOTE!

Prior to using the PRESTO Mobility Scooter **FOR THE FIRST TIME** you must **FULLY CHARGE** the batteries.

It is very important to ensure that the batteries have enough charge to perform the required journey. Setting off with a depleted battery may see you being stranded! Refer to the following pages for information on charging the batteries.

23.

CHARGING BATTERIES

The PRESTO Mobility Scooter is supplied with rechargeable maintenance free hybrid gel batteries which **MUST BE** charged using the supplied battery charger.






WARNING!

FAILURE TO USE CORRECT AND SPECIFIED CHARGER MAY RESULT IN DEATH, DAMAGE OR CANCELLATION OF WARRANTY AND STATUTORY PROTECTIONS.


Please follow these instructions to charge the batteries:

Identify where the charging socket is located on the tiller just below the handlebars.

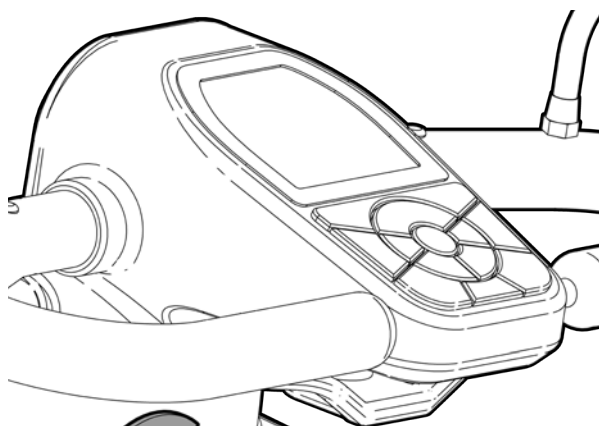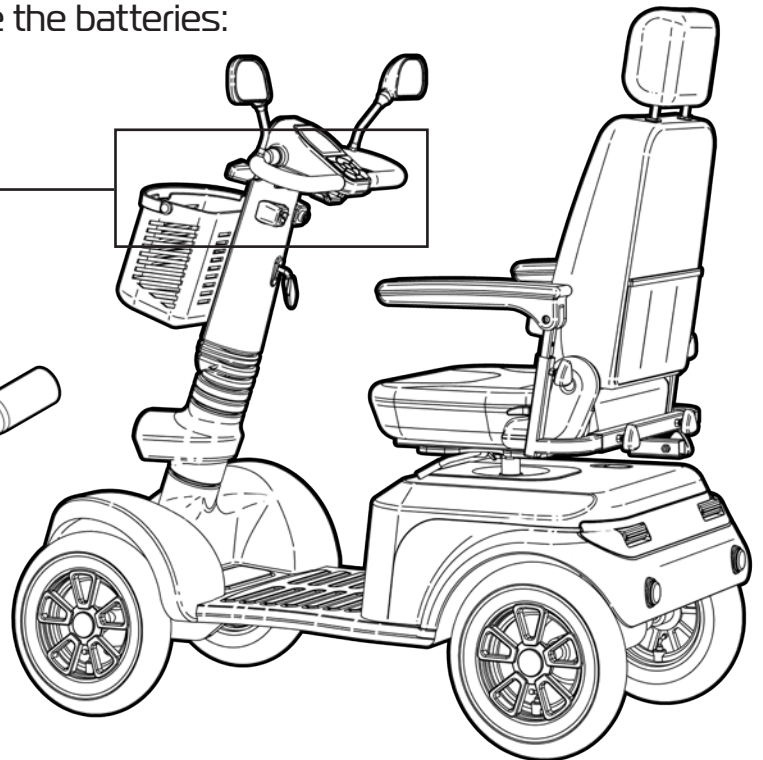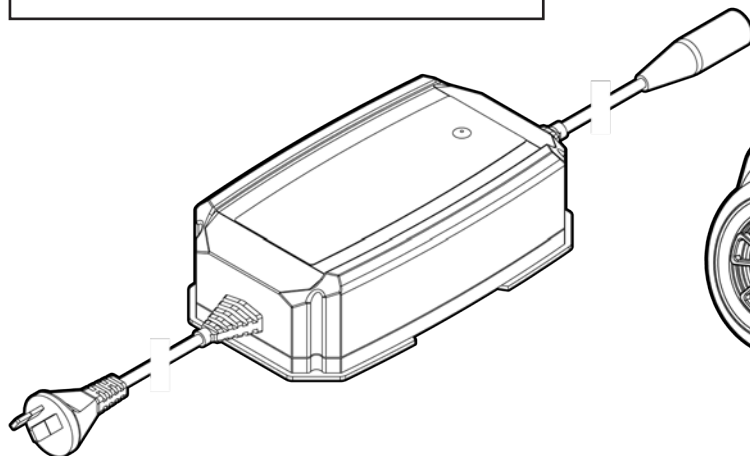

Step 1:

Rotate open the socket cover cap.

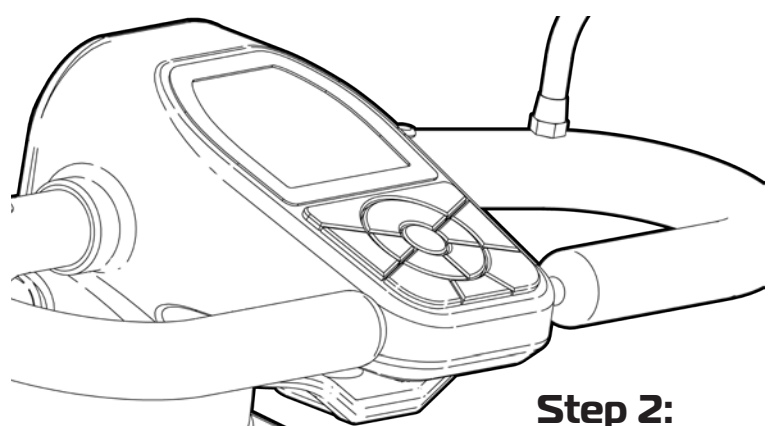


Step 2:

Plug the battery charger cable into the charger socket.


24.

CHARGING BATTERIES (CONTINUED)

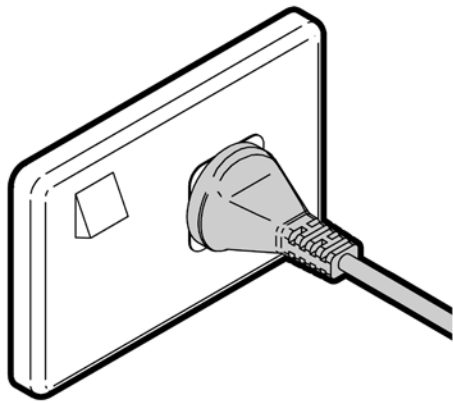

Step 3:

Plug the power cable into a power outlet and turn the power on.

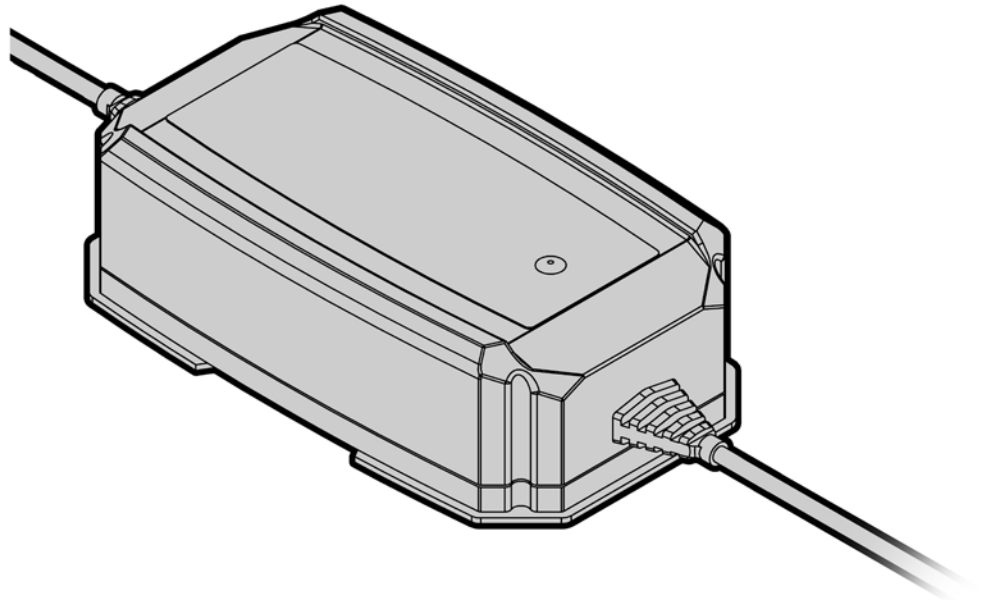


Step 4:

Battery charging should take approx. **10 hours**.

The battery is **FULLY CHARGED** when the light next to Storage Mode is on.

Refer to Battery charger user manual for more information on charger settings.

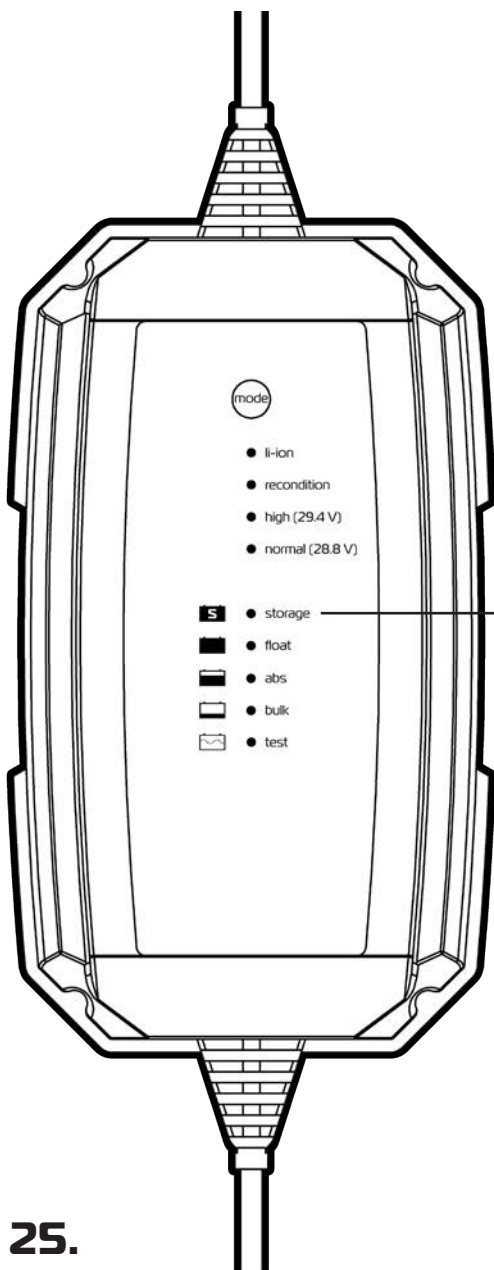

Step 5:



Unplug the charger from the scooter and close the socket cover cap.

25.

PREPARE TO RIDE SCOOTER

Sit on the scooter and rest your feet on the footplate.

Important note:
ALWAYS operate the scooter sitting down.
Never stand up and operate the scooter.

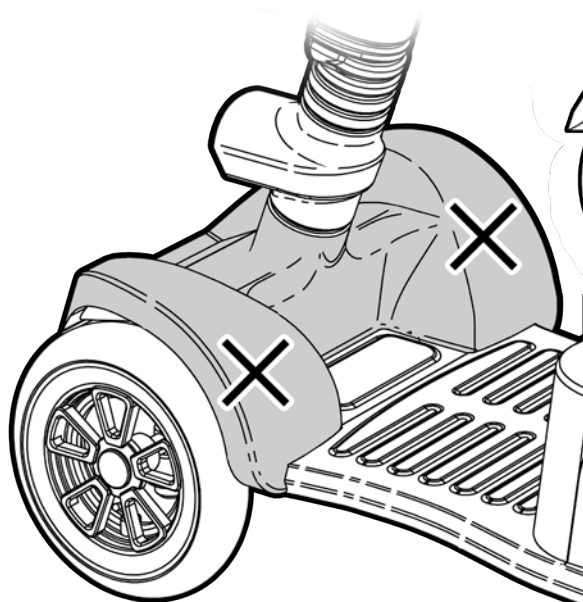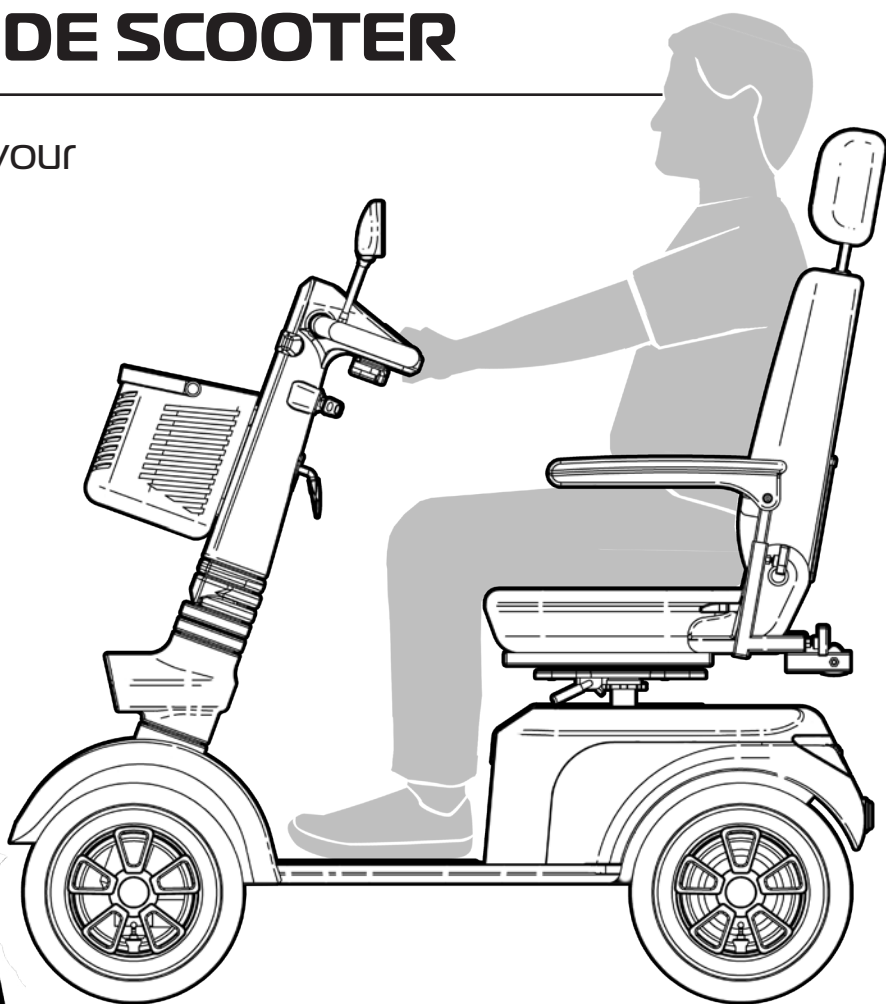

We recommend that you only rest your feet on the footrest as shown above and not on the front cover of the scooter as it might scratch and cause damage to the plastic covers.

Refer to the following pages for information on how to:

- **Turn the scooter on.**
- **Control the scooter.**
- **Disengage the motor to freewheel.**
- **Maintain the scooter.**




TURN SCOOTER ON

Please follow these instructions to fit the key and turn the scooter on:


2 keys supplied.

Keep one in a safe place as a spare.


Key

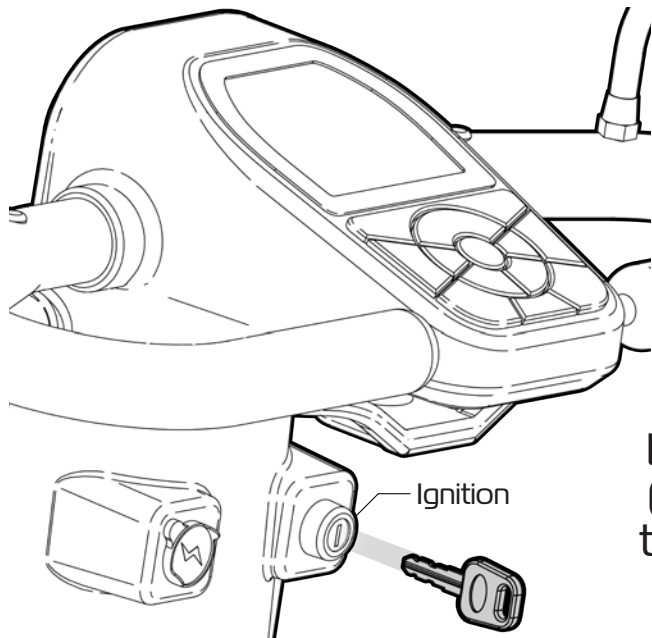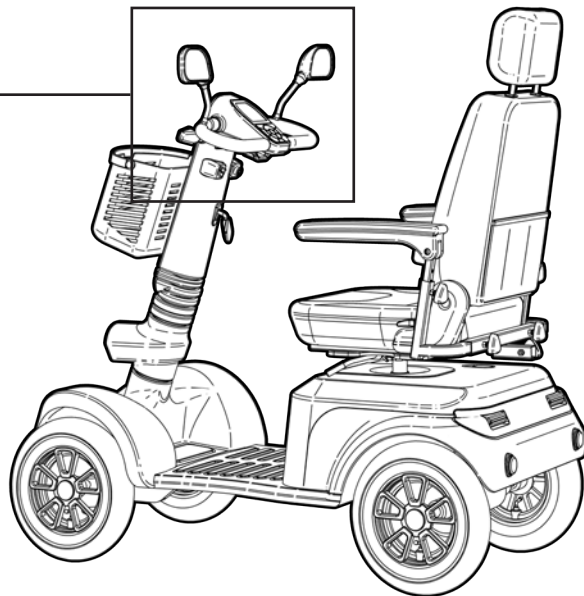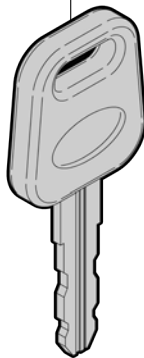

Step 1:
Locate the ignition.
(Right hand side of
the tiller underneath
the handle.)

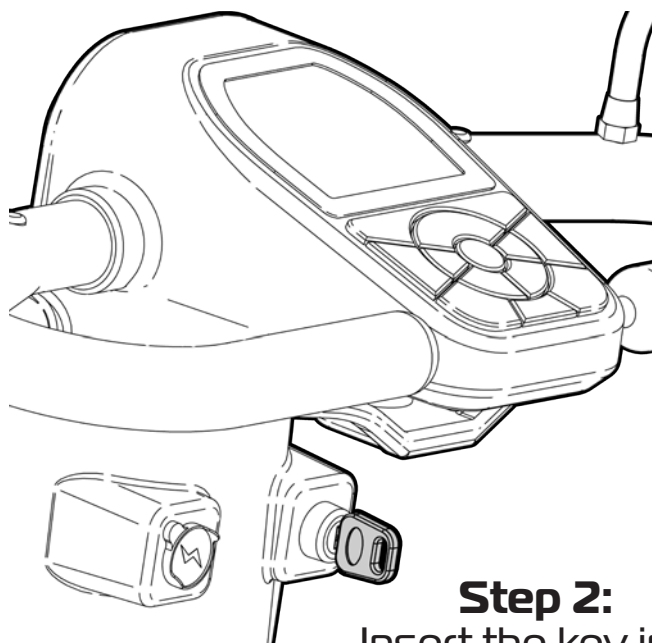

Step 2:
Insert the key into
the ignition.

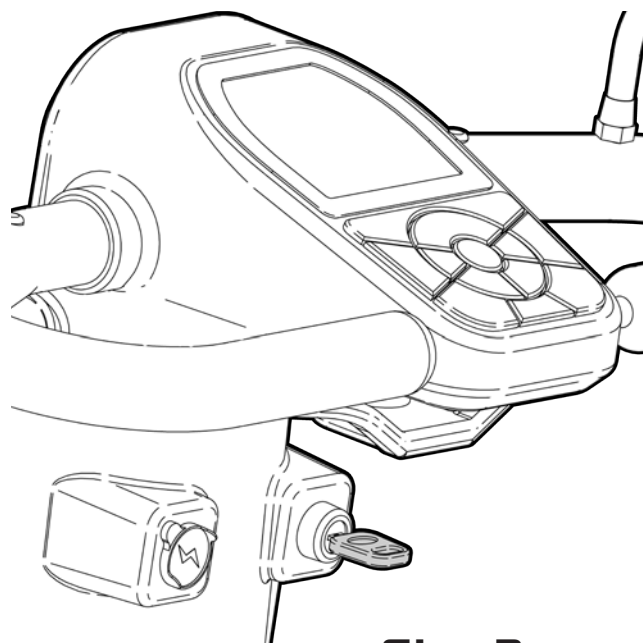

Step 3:
Turn the key to turn
the power on.

Remove the key from the ignition if **Emergency Stop** is required.


27.

ASK FOR THE BRAND

ikonmobility.com.au

SCOOTER CONTROLS

Please follow these instructions to control the scooter as required:

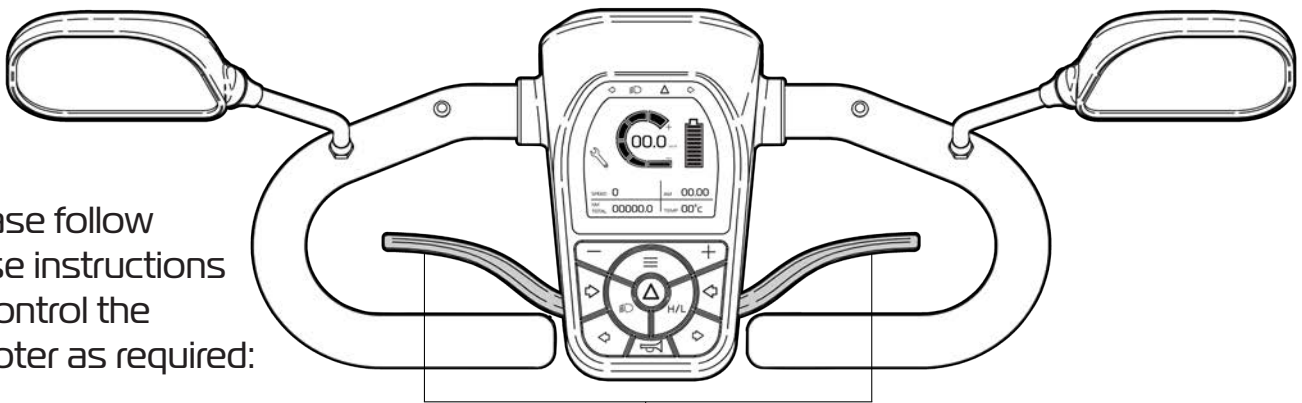

Forward / Reverse Paddles:

Pull the RIGHT hand side of lever in towards you to make the scooter move **FORWARDS**. Pull the LEFT hand side of lever in towards you to make the scooter move **BACKWARDS**.


Speed varies depending on how far the paddle is pulled in.

Scooter will stop if paddle is not pulled in.

DECREASE Speed Control
Press button to decrease speed setting.

RIGHT Indicator
Press button to turn on right indicator. Press again to turn off.

LEFT Indicator
Press button to turn on left indicator. Press again to turn off.

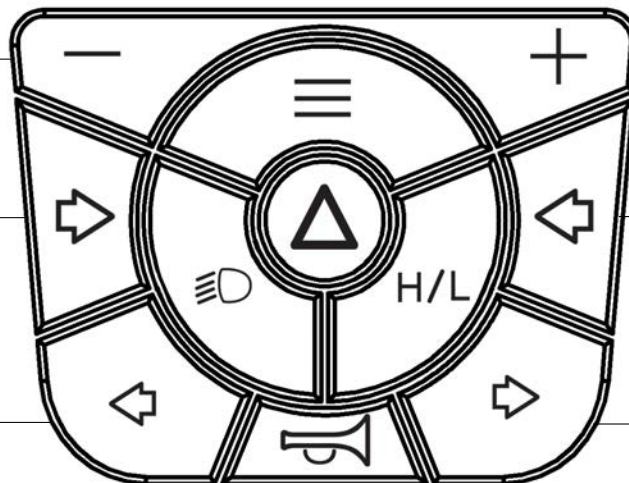

INCREASE Speed Control
Press button to increase speed setting.

LEFT Indicator
Press button to turn on left indicator. Press again to turn off.

RIGHT Indicator
Press button to turn on right indicator. Press again to turn off.

HORN
Press button to sound horn.

MENU
Press button to access menu. (Refer to page 30.)

HEADLIGHT
Press button to turn on headlight. Press again to turn off.

HAZARD
Press button to turn on hazard lights on. Press again to turn off.



HI / LOW Function
Press button to alternate between high and low function.

Please turn the page for more information on scooter controls...

28.

SCOOTER CONTROLS (CONTINUED)

The LCD screen displays the following:

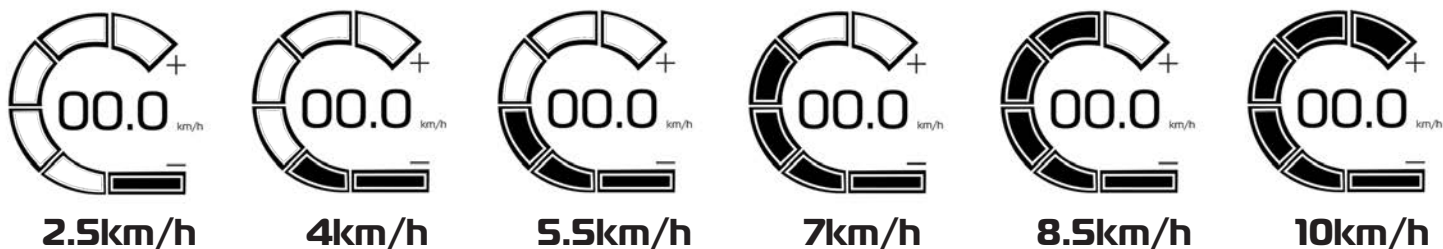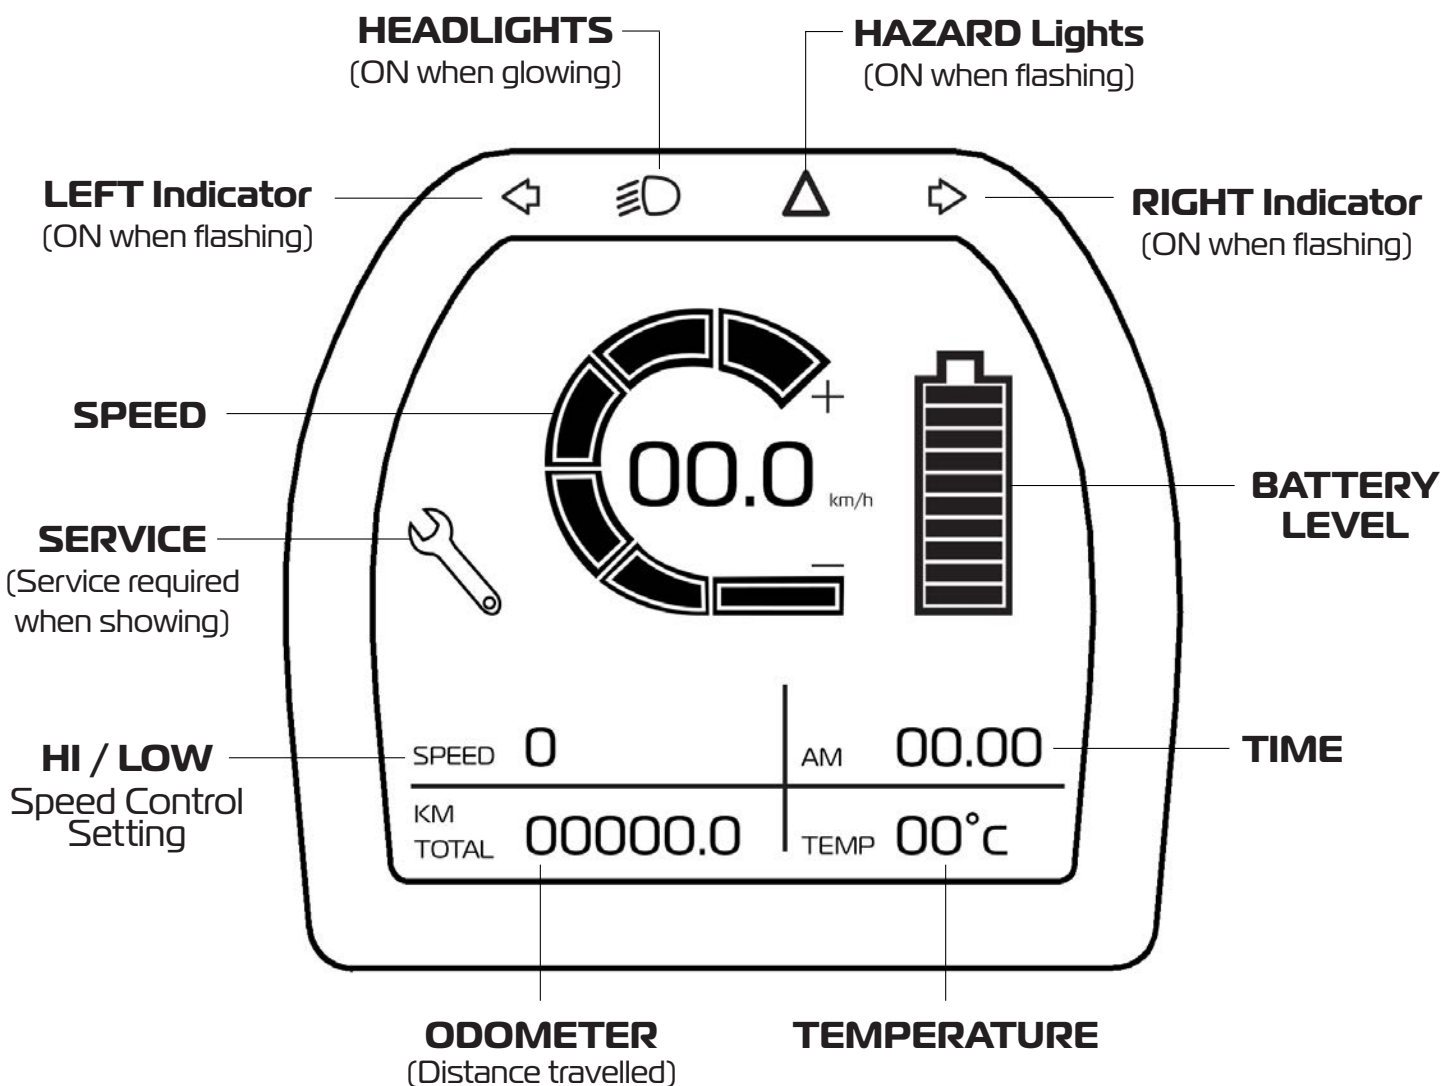

SPEEDOMETER has six speed control settings

Press the + or - buttons to change the maximum speed of the scooter to suit your driving needs.

SCOOTER CONTROLS (CONTINUED)

When using the scooter keep an eye on the battery levels.



FULL BATTERY

(Ready to use)



LOW BATTERY

(5 - 10km remaining)
Charge required soon



EMPTY BATTERY

(Charge required)

We recommend that you charge the batteries if 3 bars or less are showing. Please refer to pages 24 and 25 for information on charging the batteries.

User settings:

Please follow these instructions to set the time, date, temperature and distance value on the display screen:

1. Turn the scooter on.
2. Press the menu button for 3 seconds.
3. Press the + button to switch between am and pm.
4. Press the menu button and then press the + or - button to set hour.
5. Press the menu button and then press the + or - button to set minutes.
6. Press the menu button and then press the + or - button to switch between °C or F.
7. Press the menu button and then press the + or - button to switch between km or miles.
8. Press the menu button to return to the main screen.

IMPORTANT NOTE


If you are ever unsure about any aspect when controlling the PRESTO Mobility Scooter please contact your supplier for support.

DISENGAGE MOTOR

Please follow these instructions to disengage the motor so the scooter can be pushed around without power when required (Freewheel):

IMPORTANT NOTE

- NEVER disengage the motor on an incline.
- Never ride the scooter when the motor is disengaged as the braking system is also disengaged.

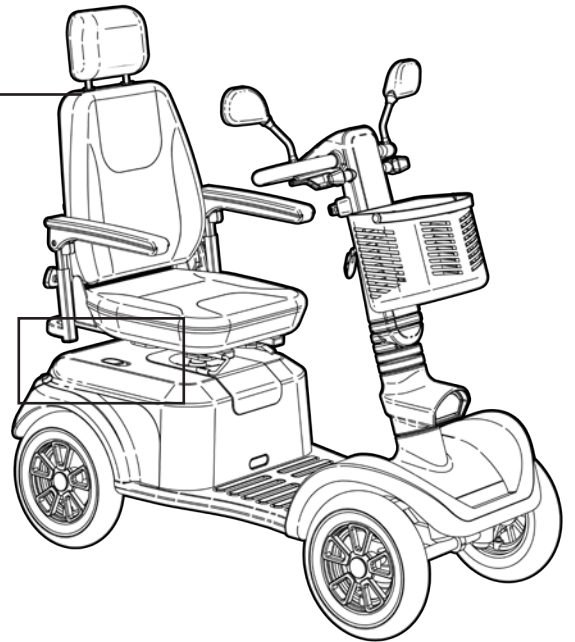


Step 1:

Remove the key from the scooter.

Step 2:

Using your finger lift the lever up to disengage motor and allow the scooter to be pushed around. (Freewheel)


Lever UP
**MOTOR
DISENGAGED**
Scooter can be pushed around.

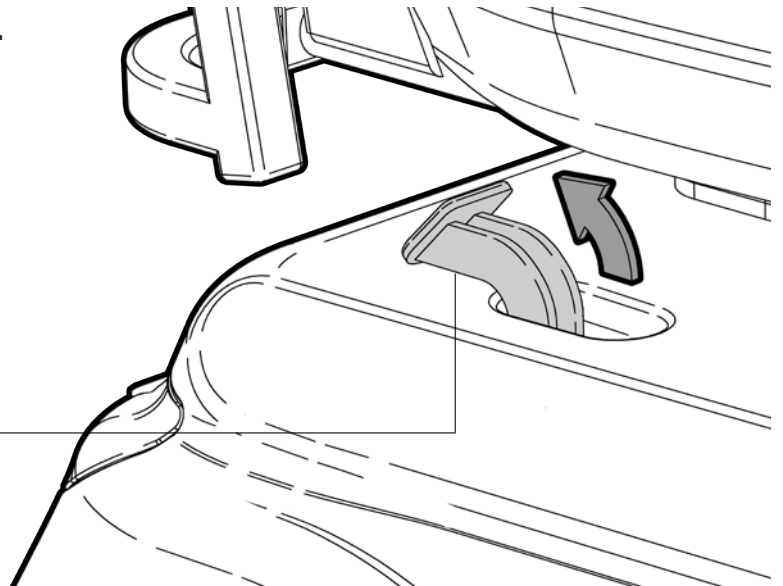

Step 3:

As soon as you have finished freewheeling the scooter - use your hand to push lever down and re-engage the motor.

Lever DOWN
**MOTOR
ENGAGED**
Scooter will only move under power.

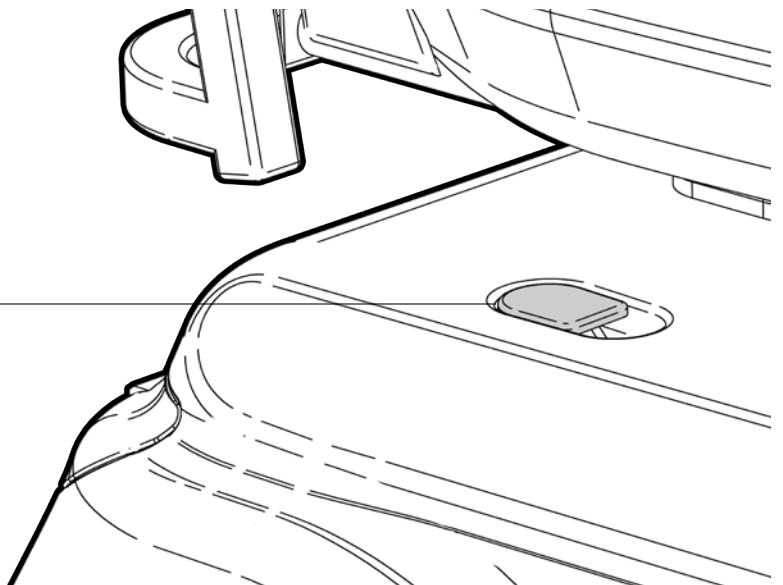

TROUBLESHOOTING

If the PRESTO Mobile Scooter fails to operate please check the following aspects:


- Unit is switched on.
- Battery has been fitted.
- All plugs and cable connections are firmly fitted.
- Battery level shows sufficient charge.
- Motor has been engaged. (not freewheeling)

If the motor has been disengaged and the scooter power has been switched on - the scooter will not operate until it is turned off and then turned on again.

If these troubleshooting tips do not fix the issue with the scooter please contact your supplier or IKON Mobility direct for support.

Do not attempt to unless you are a certified technician and have been trained to service the PRESTO Mobile Scooter.

Unauthorised repairs and fitting of non genuine parts will void your warranty and may seriously compromise the users safety.

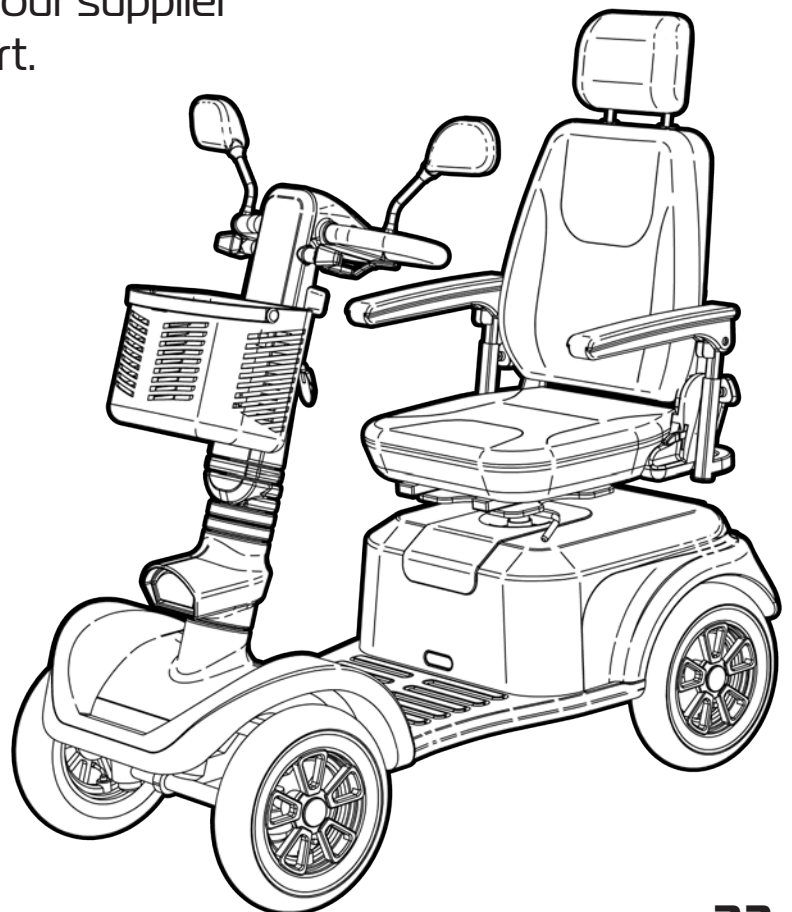

INSPECT / MAINTAIN / SERVICE

INSPECTIONS

Visually and physically look over the PRESTO Mobile Scooter for signs of damage or wear prior and during use. Inspect the entire scooter and particular attention to the following areas:

Tyres / Seat / Backrest / Armrests / Tiller / Display / Handgrips / Fixings

Check to ensure that all parts work and scooter can be controlled as required.

IMPORTANT NOTE

**If you suspect damage or any fault DO NOT USE the scooter!
and contact your supplier for service support.**

MAINTENANCE

The PRESTO Mobile Scooter is designed to be maintenance free and most components are sealed.

Inspect and tighten any loose wheel bolts, seat and arm tightening bolts, and other nuts and bolts on a regular basis.

The driving axles and seat post should always have a very light coat of multipurpose lubricant or grease to assist with movement.

DO NOT USE TOO MUCH GREASE! Drips may stain carpets, furnishings etc.

It is recommended that the driving axles (inside the drive wheel assembly) be checked and cleaned occasionally for hair and debris build-up, which will hinder the performance of the scooter.

Check the battery on a regular basis. For extended battery life, it is highly recommended that the battery be fully charged after each use. If the battery is weak, severely discharged or old, a variety of problems may occur with the unit including charging problems, reduced speed, loss of range, and others. Please contact your scooter supplier for battery replacement.

SERVICING

Ensure the PRESTO Mobile Scooter scooter is serviced every 12 months by an authorised dealer / service technician to ensure it remains in safe working order. Failure to do so may cause catastrophic failure with possible injury and damage to surrounding property. Regular servicing will ensure trouble free operation.

If you have any questions about the inspecting, maintaining or service requirements of the PRESTO Mobile Scooter please contact your supplier or IKON Mobility direct.

TYRE CARE

The PRESTO Mobility Scooter is fitted with tubeless pneumatic tyres.

The tyres should be inspected and maintained on a regular basis.



Visually inspect the tread pattern on all four tyres and if excessive or uneven wear exists contact your supplier for advice and replacement tyres.

Tyre pressure:

We recommend that you check the tyre pressure on all four tyres every two weeks.

Maintain tyre pressures at around 40 PSI.

Checking the tyre pressure regularly helps keep your scooter running smoothly, maintain grip on the ground when turning and reduce the amount of wear on the tyre. Also fully inflated tyres will reduce the amount of electricity used to drive the scooter.

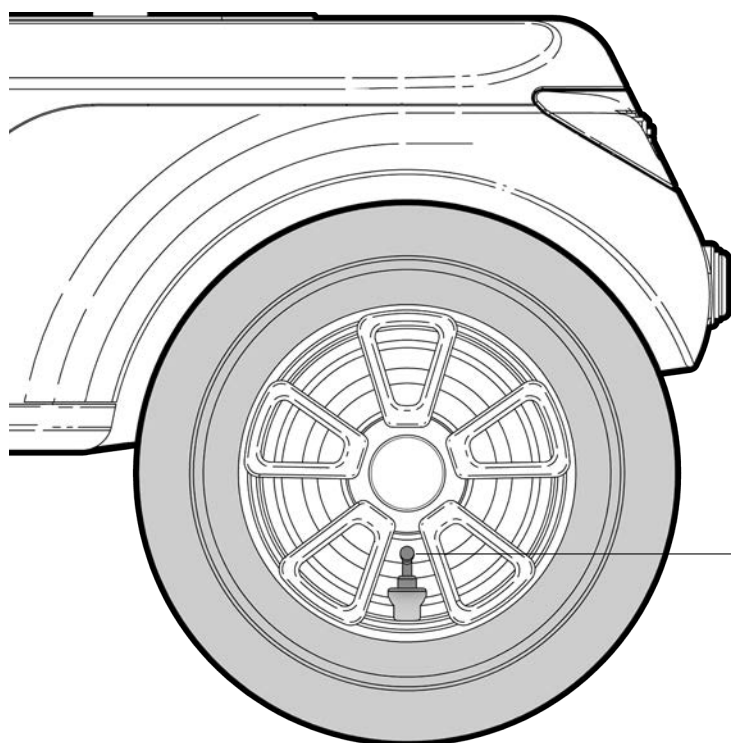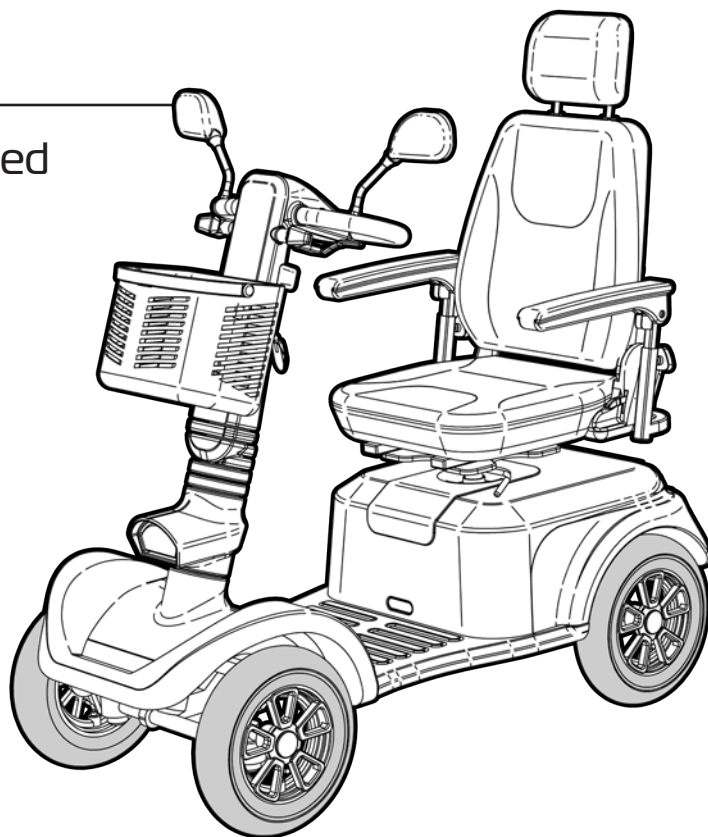

Tyre valve

Important note:
The tyres should NEVER be over inflated!

CLEANING THE SCOOTER

Clean the PRESTO Mobility Scooter on a regular basis.

You must take extreme care when cleaning any electrical aspect of the scooter as water or fluid of any kind can cause severe damage.

- Remove the battery pack from the scooter prior to cleaning.
- Only use a soft damp cloth and a non-abrasive cleaning solution or mild detergent.

Abrasive cleaners or abrasive cleaning pads could damage the scooter and should not be used.

- Do not use petrol / solvents / vapourising solutions on the scooter as they may damage the plastic coverings.

IMPORTANT NOTE: NEVER use a hose to wash the scooter.

- Towel dry any wet areas after cleaning. Ensure the scooter is completely dry before reinstalling battery pack and using the scooter.

DISPOSAL OF SCOOTER / BATTERY

Always dispose of the scooter if required in the appropriate manner.

Recycle parts when possible.

Always remove the battery from the scooter and follow these guidelines when dealing with an obsolete battery:

- DO NOT CRUSH BATTERIES
- DO NOT HEAT OR INCINERATE
- DO NOT SHORT CIRCUIT
- DO NOT DISMANTLE
- DO NOT IMMERSE IN ANY LIQUID
- DISPOSE OF BATTERIES APPROPRIATELY

If you have any questions about the cleaning or disposal of the PRESTO Mobility Scooter please contact your supplier or IKON Mobility direct.

WARRANTY

The IKON Mobility **PRESTO Mobility Scooter** (IK8PR) is covered by the following warranty from the date of purchase:

The Warranty Terms and Conditions noted below provide your IKON Mobility scooter with excellent coverage against possible defective parts or possible faulty workmanship. If at anytime you have a warranty issue YOU MUST contact the selling IKON Mobility dealer as they are required to undertake the diagnosis and labour content of the warranty. IKON Mobility will as noted below supply spare parts as required as part of this agreement.

Note: Warranty is not transferable.

STRUCTURAL FRAME: 5 YEARS

(Main frame, Seat frame, Tiller frame)

IKON Mobility warrants that the frame will be free from defects under normal use, for a period of five (5) years from the date of purchase by the original customer.

VICTRON BATTERY CHARGER: 5 YEARS

IKON Mobility warrants that the Victron Battery Charger will be free from defects under normal use, for a period of five (5) years from the date of purchase by the original customer.

DRIVE TRAIN ASSEMBLY: 18 MONTHS

(Transaxle, Motor, Batteries, Battery Charger)

IKON Mobility warrants that the drive train assembly will be free from defects under normal use, for a period of eighteen (18) months from the date of purchase by the original customer.

OTHER PARTS: 12 MONTHS

IKON Mobility warrants that the drive train assembly will be free from defects under normal use, for a period of twelve (12) months from the date of purchase by the original customer.

IKON Mobility will repair or replace, at our option free of charge any part found on examination by IKON Mobility to be defective in material and or workmanship within the warranty period. All parts claimed under warrant must be returned to IKON Mobility in their present condition.

Only an authorised "Warranty Dealer" of IKON Mobility can undertake warranty work. Always contact the selling IKON Mobility dealer to arrange all work and assess if warranty applies.

WARRANTY (CONTINUED)

Exclusions

- Normal wear items are not covered under warranty. These items include such items as brushes, tyres, tubes, brake pads, upholstery, seating and armrests.
- Damage caused by excessive, abusive, misuse, negligence, accident or water
- Improper maintenance, maintenance carried out by a non approved "Warranty Dealer".
- Improper operation /storage.
- Any commercial use what so ever.
- Where an authorised dealer has not lodged all required documentation at the appropriate time, the warranty is void.
- All warranties provided do not extend to purchasers of used or secondhand equipment.
- All transportation cost associated with the submission and return of the repair or replacement under warranty (as determined by IKON Mobility) are the responsibility of the original customer.

During the guarantee period, if the company is satisfied there is a genuine fault, we will repair or replace the product at our earliest convenience.

In order for this guarantee to be valid, you must:

- Be the original purchaser
- Provide a copy of the original invoice.
- Comply with manufacturer care and maintenance instructions.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement part for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to major failure.


Do not modify the scooter in any way or fit any parts or accessories that are not specified as an option for the product. To do so will void your warranty and may seriously compromise your safety.

If you have any issues or questions about the PRESTO Mobility Scooter warranty please contact your supplier or IKON Mobility direct.


ACCESSORIES

**SCOOTER
XTRAS**


The IKON MOBILITY **PRESTO** Mobility Scooter can be fitted with the following Scooter Xtras range of accessories:

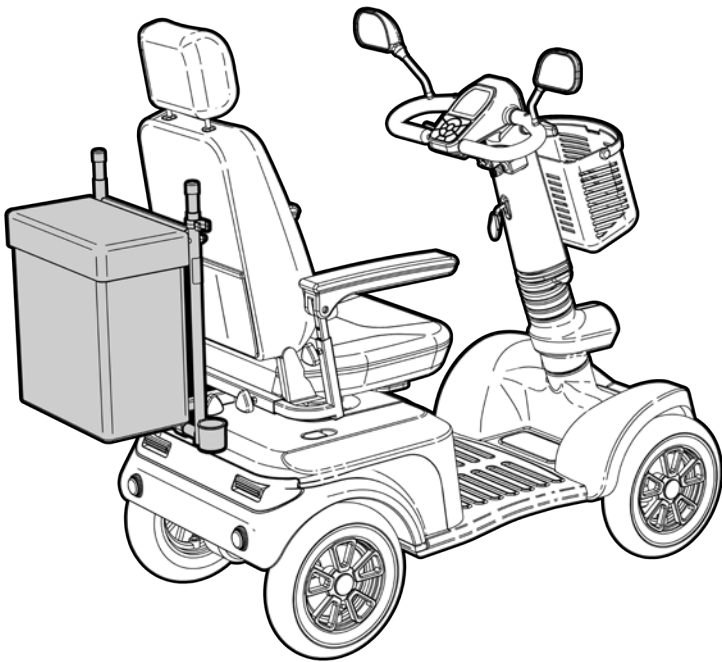


BAG CARRIER
SE-BC

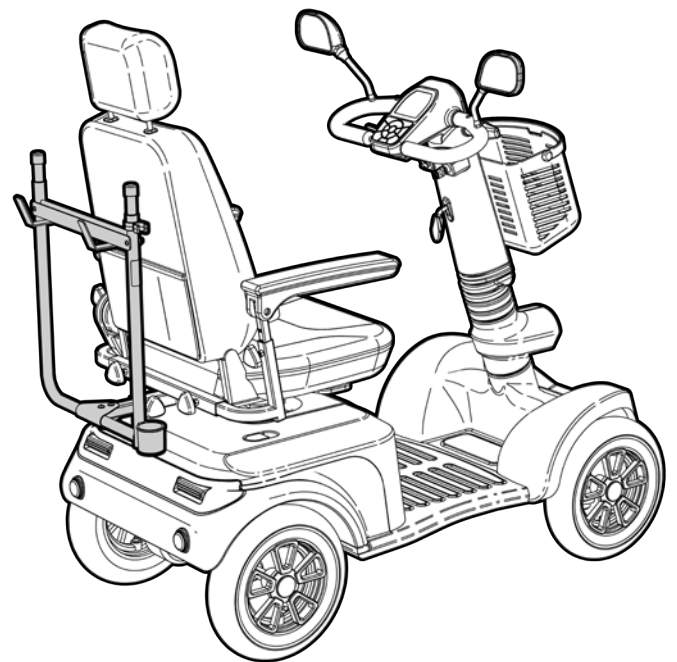

SEAT WALKER CARRIER
SE-WWC

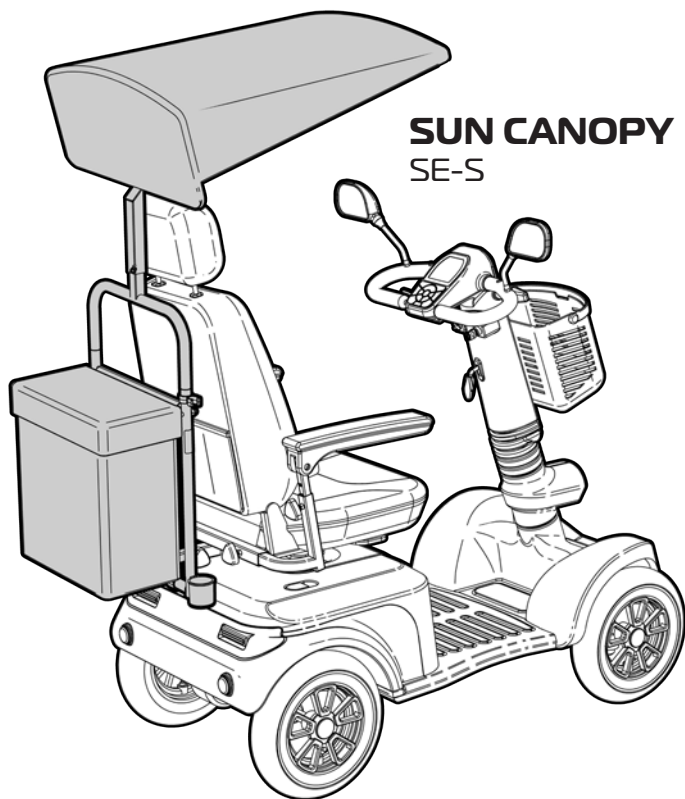

SUN CANOPY
SE-S

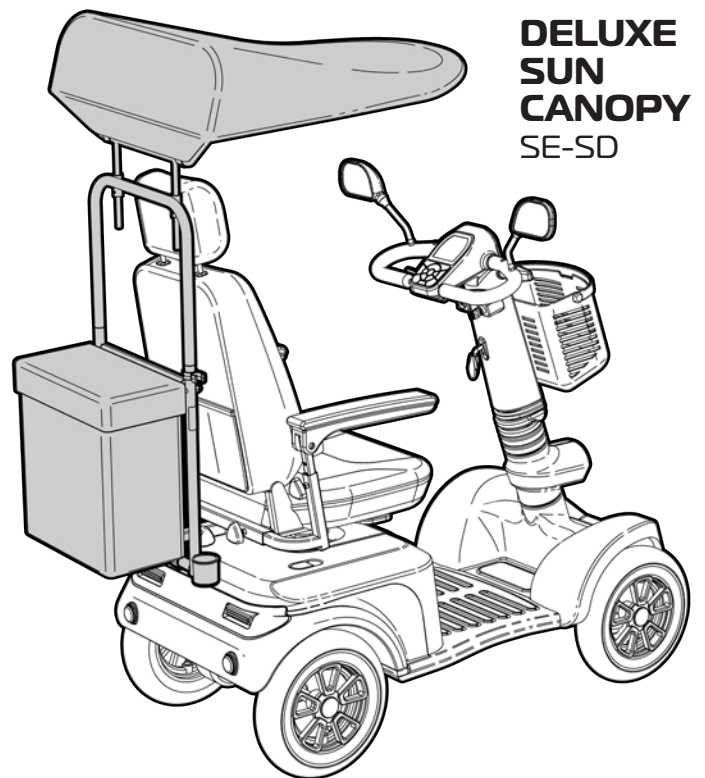

**DELUXE
SUN
CANOPY**
SE-SD

Please turn the page for more accessory options...

38.


ASK FOR THE BRAND

ikonmobility.com.au


ACCESSORIES (CONTINUED)

**SCOOTER
XTRAS**


The IKON MOBILITY **PRESTO** Mobility Scooter can be fitted with the following Scooter Xtras range of accessories:

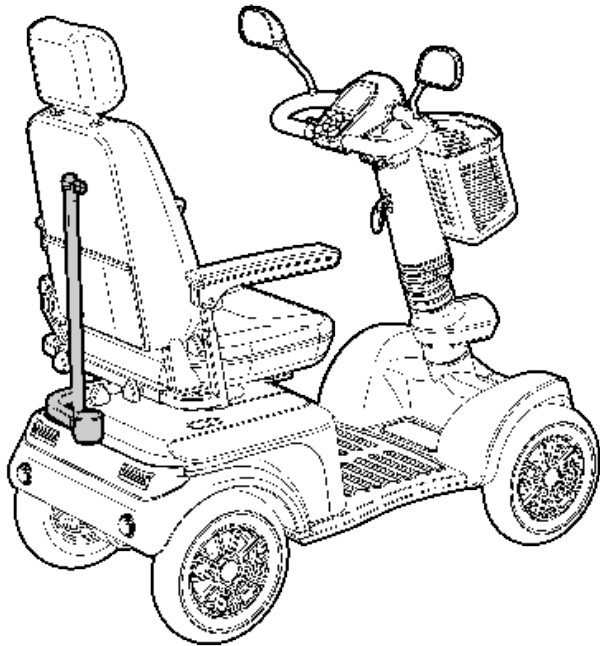


WALKING STICK CARRIER
SE-WSH

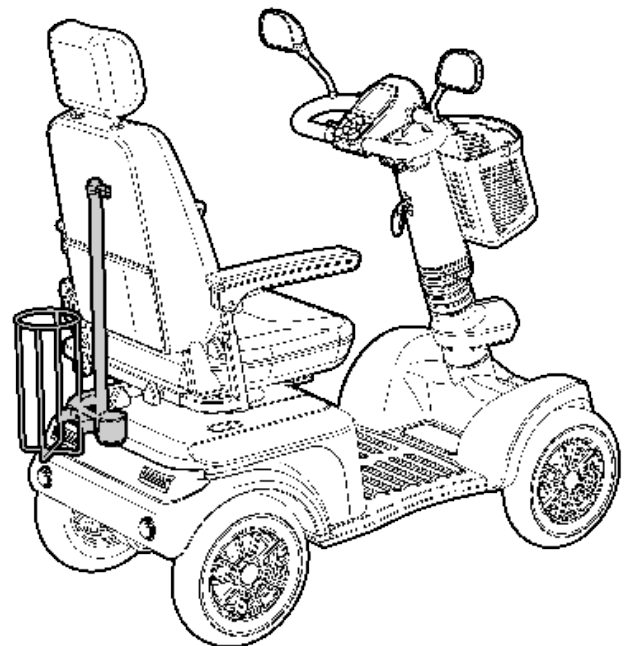

OXYGEN BOTTLE CARRIER
SE-OBC

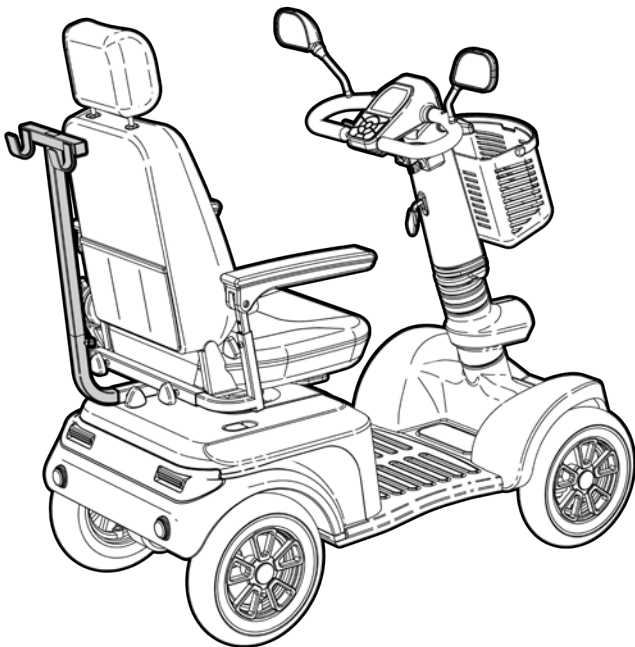

WALKING FRAME CARRIER
SE-WFC

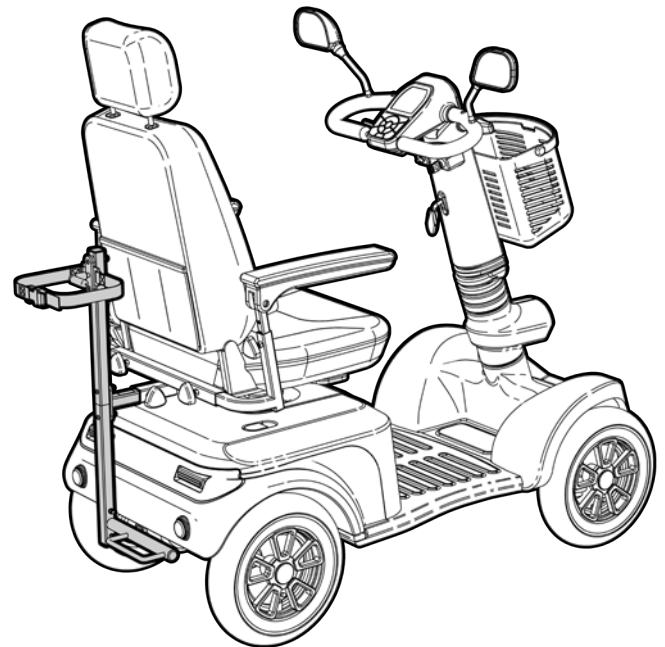

SIDE FOLDING WALKER CARRIER
SE-SFWC

39.

Please turn the page for more accessory options...

ASK FOR THE BRAND

ikonmobility.com.au

ACCESSORIES (CONTINUED)

**SCOOTER
XTRAS**

The IKON MOBILITY **PRESTO** Mobility Scooter can be fitted with the following Scooter Xtras range of accessories:


MOVO CANOPY

SE-MC




SAFETY FLAG HOLDER

SE-SFH

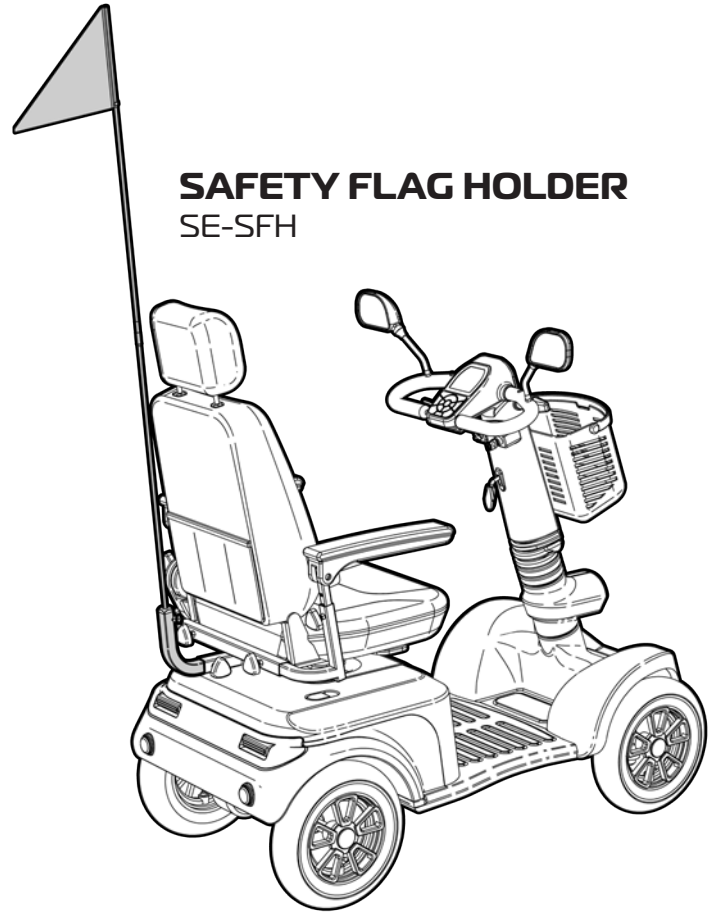

MOBILE PHONE HOLDER

SE-022

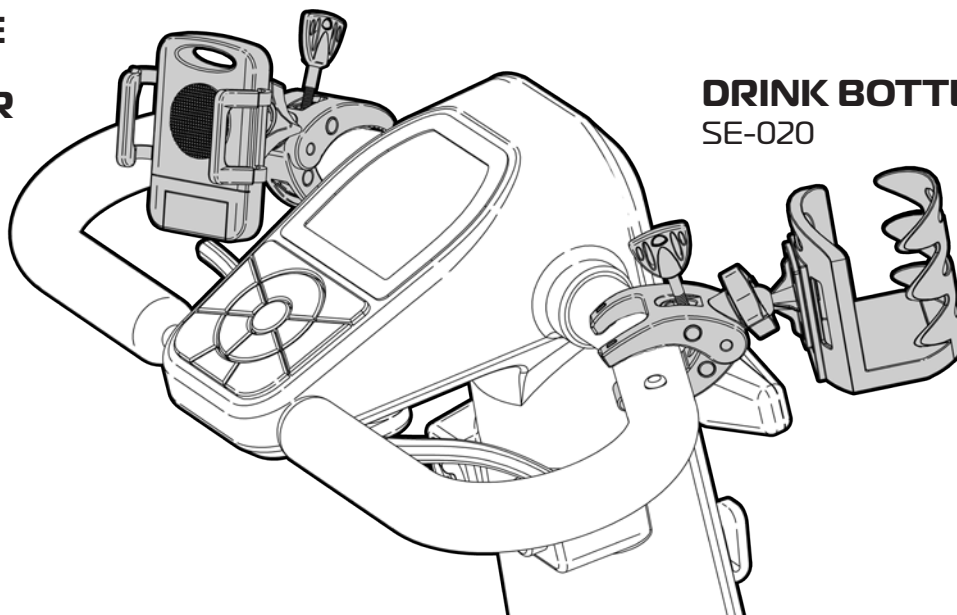

DRINK BOTTLE HOLDER

SE-020

Please contact your supplier or IKON MOBILITY if you require further information on any the Scooter Xtras accessories that suit the PRESTO Mobility Scooter.

40.

DISTRIBUTOR:



ASK FOR THE BRAND

ikonmobility.com.au