IK5SE MOBILITY SCOOTER · OWNER GUIDE


How to display your distance

Follow the steps below to show the total distance on your IK5SE display, then switch the scooter back to electric mode for riding.

Before you start: the distance can only be shown while the scooter is in **push mode**. Always finish with Steps 6–8 to switch back to **electric mode** before you ride.

PART ONE · STEPS 1–5

Show the distance

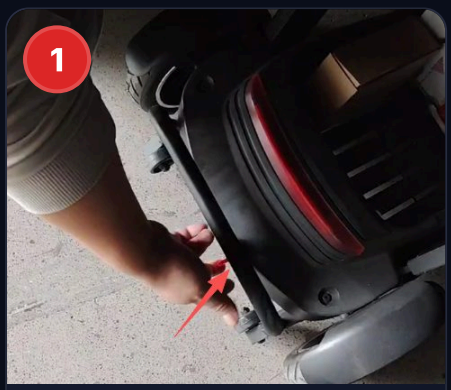

Lift the motor lever

Lift the motor lever at the rear of the scooter. This puts the scooter into push mode.

Push mode



Hold the left lever & power on

Pull and hold the lever on the left-hand side of the handlebar, and turn on the power at the same time.



Wait for the display to load

Keep holding the lever while the display finishes loading.



Tap the headlight button

Press the headlight button repeatedly in quick succession until the distance is shown on the display.




Read your distance

The distance now appears on the display. Make a note of it if you need it.

PART TWO · STEPS 6–8

Return to normal riding

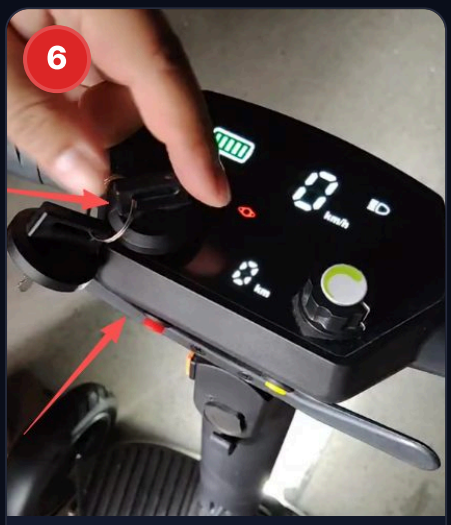

Release & power off


Release the left-hand lever and turn off the power.



Lower the motor lever

Move the motor control lever back down. This returns the scooter to electric mode.

Electric mode

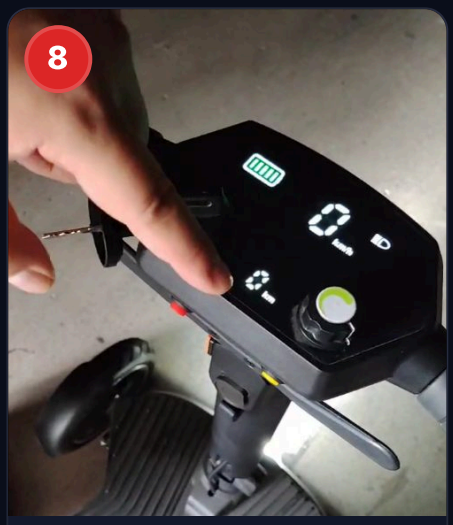

Power back on

Turn the power switch back on. Once loading is complete, the display will show as usual and you're ready to go.

Need a hand?

If the distance doesn't appear, or you have any questions about your IK5SE, our friendly team is happy to help.

Get in Touch

08 9248 4180

ikonmobility.com.au · 100% Australian Owned & Operated